

Audi A4

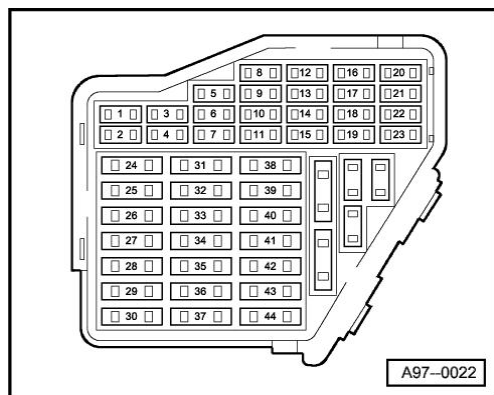
Current Flow Diagram

No. 53 / 1

Edition 01.1996

Ambient temperature and selector lever position indicator

From model year 1996

Fuse box:

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

No. 53 / 2



97-17961

E87	- Control and display unit for air conditioner
G17	- Ambient temperature sensor
G106	- Ambient temperature indicator
J217	- Automatic gearbox control unit
J218	- Combi-processor in dash panel insert
T1b	- 1-pin connector, brown, left connector point, A pillar
T10v	- 10-pin connector, brown, right connector point, A pillar
T26	- 26-pin connector, yellow, on dash panel insert
T26a	- 26-pin connector, blue, on dash panel insert
Y6	- Selector lever position indicator
44	- Earth point, lower part of left A-pillar
135	- Earth connection -2-, in dash panel wiring harness
A2	- Positive (+) connection (15), in dash panel wiring harness
A19	- Connection (58d), in dash panel wiring harness
A60	- Connection (vehicle speed signal), in dash panel wiring harness
A73	- Connection (ambient temperature display), in dash panel wiring harness
A74	- Positive (+) connection (15a, fuse 5), in dash panel wiring harness
*	- Only models with automatic air conditioner
**	- Only models with four-speed automatic gearbox
***	- Only models with five-speed automatic gearbox
****	- Does not apply to models with automatic air conditioner