

Как правильно читать номер запчасти JP Group

Структура номера:

Номер запчасти JP Group состоит из 10 цифр, т.е. 11 129 014 00.

Цифра 1-я и 2-я (11) обозначают производителя автомобиля, в этом случае это VAG.

Цифры 3-я, 4-я и 5-я (129) - обозначают запчасть в группе изделий, в этом случае это 1-я группа(моторная), а сама запчасть - масляный поддон.

Цифры 6-я, 7-я и 8-я (014) - обозначают данный номер детали в партии. Номера от 1 до 500 непосредственно относятся к группе изделий. Номера от 501 до 999 это порядковый номер изделия в группе.

Цифра 9-я (0) - показывает на то, что это за комплектация-стандарт/набор/левый или правый:

0 = Стандарт

1 = Набор

5 = Левый набор

6 = Правый набор

7 = Левый

8 = Правый

Цифра 10-я (0) - показывает торговую марку, бренд(лежит внутри в коробке):

0 = JP Group бренд (свое производство)

1 = JP Group бренд (свое производство)

2 = Премиум бренд

3 = Альтернативный бренд (свое производство)

4 = Альтернативный бренд (свое производство)

5 = Альтернативный бренд (свое производство)

6 = Неизвестный бренд

Как правильно читать номер запчасти JP Group

11 129 014 0 0 (068103601AC)

(11)-Автомобильный бренд

(129)- Группа изделий

014) - Данный номер в группе

(0) Стандарт/набор/левый/правый

(0)- Бренд(что в коробке)

Вышеуказанный номер:

• 11 = VAG

• 129 = Масляный поддон

• 014 = Данный номер детали

• 0 = Стандарт (не набор, левый или правый)

• 0 = JP Group бренд

Как правильно читать номер запчасти JP Group

Данный номер детали:

8195400100 - Указатель сигнала поворота, на крыле, янтарный, с резиновой прокладкой, левый/правый , E-marked.

8195450602 - Линза для указателя поворота, бесцветная, левая/правая , HELLA.

Вышеуказанный пример:

Данный партийный номер от 1 до 500 относится непосредственно к группе изделий, в этом примере это **954 001**, который обозначает указатель поворота, передний.

Данный партийный номер от 501 до 999 относится к группе изделий, в этом примере это **954 506**, который обозначает линзу для указателя поворота , переднего.

Автомобильный бренд

11	VAG (VW/Audi/Seat/Skoda)
12	OPEL
13	MERCEDES
14	BMW
15	FORD
16	PORSCHE
30	ALFA ROMEO
31	CITROEN
32	DAEWOO
33	FIAT
34	HONDA
35	HYUNDAI
36	KIA
37	LAND ROVER
38	MAZDA
39	MITSUBISHI
40	NISSAN
41	PEUGEOT
42	PROTON
43	RENAULT
44	ROVER
45	SAAB
46	SUBARU
47	SUZUKI
48	TOYOTA
49	VOLVO
79	ANDRE
81	VW CLASSIC
82	PORSCHE CLASSIC
83	MERCEDES CLASSIC
89	ANDRE CLASSIC
98	STYLING
99	UNIVERSAL

Группа изделий(Product Group)	
Детали двигателя(ENGINE PARTS)	
100	ENGINE COMPLETE
101	CYLINDER BLOCK AND PARTS
102	PISTONS
103	PISTON RINGS
104	CRANKSHAFT AND PARTS
105	CRANKSHAFT MAIN BEARINGS
106	ROD BEARINGS
107	PISTON/CYLINDER SET
108	CONNECTING ROD AND PARTS
110	MISCELLANEOUS CYLINDER BLOCK PARTS
111	CYLINDER HEAD AND PARTS
112	CAMSHAFT AND PARTS
113	VALVES AND PARTS
114	CAM FOLLOWERS
115	ROCKER ARM
116	PUSH ROD
120	MISCELLANEOUS CYLINDER HEAD PARTS
121	TIMING BELT
122	TENSIONER FOR TIMING BELT
123	TENSIONER DAMPER FOR TIMING BELT
124	COVER FOR TIMING BELT
125	TIMING CHAIN
126	TIMING CHAIN TENSIONER
129	OIL SUMP
131	OIL PUMP
132	OIL DIPSTICK AND SUPPORT
135	OIL COOLER
136	OIL FILLER CAP / PIPE
137	OIL PIPES AND HOSES
138	OIL DRAIN PLUG
140	MISCELLANEOUS TIMING/OIL PARTS
141	WATER PUMP AND PARTS
142	RADIATOR AND PARTS
143	RADIATOR HOSES
144	WATER PIPES
145	WATER FLANGES AND THERMOSTAT HOUSING
146	THERMOSTAT
147	EXPANSION TANK
148	EXPANSION TANK CAP
149	FAN/VISCOUS COUPLING FOR FAN
150	MISCELLANEOUS COOLING PARTS
151	CARBURETOR AND PARTS
152	FUEL PUMP

153	FLANGE FOR AIR INTAKE
154	THROTTLE VALVE CONTROL UNIT
155	INJECTOR AND PARTS
156	FUEL TANK AND PARTS
157	FUEL GAUGE
158	SENDER FOR FUEL GAUGE
160	MISCELLANEOUS INTAKE PARTS
171	VACUUM PUMP
174	TURBO
175	INTERCOOLER
176	OIL PRESSURE PIPE
177	PARTS FOR TURBO/INTERCOOLER
179	RUBBER MOUNT FOR ENGINE
180	V-BELTS
181	RIBBED BELTS
182	TENSIONER FOR BELTS AND FAN CLUTCH
183	BELT PULLEY
185	OIL FILTER
186	AIR FILTER
187	FUEL FILTER
189	ENGINE GASKET SET - COMPLETE
190	CYLINDER HEAD GASKET SET
191	CYLINDER BLOCK GASKET
192	VALVE COVER GASKET
193	CYLINDER HEAD GASKET
194	OIL SUMP GASKET
195	OIL SEALS
196	ENGINE GASKETS (FOR WATER FLANGE/INTAKE/EXH. MAN.)
199	MISCELLANEOUS ENGINE PARTS

Система выпуска отработавших газов(EXHAUST SYSTEM)	
200	EXHAUST SYSTEM COMPLETE
201	MANIFOLD
202	FRONT PIPE
203	CATALYTIC CONVERTER
204	INTERMEDIATE PIPE
205	INTERMEDIATE EXHAUST
206	REAR EXHAUST
207	TAIL PIPE
208	SPORTS EXHAUST
209	CATALYTIC CONVERTER - UNIVERSAL
211	GASKET FOR EXHAUST
212	GASKET FOR CATALYTIC CONVERTER
213	GASKET SET FOR EXHAUST
214	EXHAUST CLAMP

215	CONNECTION PIPE
216	EXHAUST BRACKET
217	MOUNTING KIT FOR EXHAUST
231	HEAT EXCHANGER (AIR COOLED MODELS)
232	HEAT CONTROL BOX
233	J-TUBE
234	MOUNTING FOR HEAT EXCHANGER
235	HEATER HOSE
241	FLEX PIPE WITH INTERLOCK INNER LINER
242	FLEX PIPE WITH BRAIDED INNER LINER
243	FLEX PIPE WITHOUT INNER LINER
244	FLEX PIPE WITH WELDED ENDS
245	FLEX PIPE, OVAL, WITHOUT WELDED ENDS
246	FLEX PIPE - UNIVERSAL
247	CONVELUTED TUBE
248	SPECIAL APPLICATIONS
250	MISCELLANEOUS EXHAUST PARTS

Обогрев и кодиционирование(HEATING AND AIR)	CONDITIONING
261	BLOWER FOR HEATER
262	RESISTOR FOR BLOWER
263	HEAT EXCHANGER (WATER COOLED MODELS)
264	HEATER VALVE
271	COMPRESSOR
272	CONDENSER
273	EVAPORATOR
274	DRIER
275	PRESSURE SWITCH FOR AIR CONDITION
280	MISCELLANEOUS HEATING PARTS
281	INTERIOR AIR FILTER

Система управления сцепления и коробка передач(CLUTCH AND TRANSMISSION)	
301	CLUTCH PRESSURE PLATE
302	CLUTCH DISC
303	CLUTCH RELEASE BEARING
304	CLUTCH SET
305	SLAVE CYLINDER
306	MASTER CYLINDER
307	CLUTCH OPERATING LEVER AND SHAFT
310	MISCELLANEOUS CLUTCH PARTS
311	GEAR BOX COMPLETE
312	GEAR SHIFT HOUSING
313	SYNCHRO RING FOR GEAR BOX

314	BEARING FOR GEAR BOX
315	BUSHING FOR GEAR SHIFT
316	GEAR SHIFT LEVER AND ROD
317	REPAIR KIT FOR GEAR SHIFT
318	FILTER FOR GEAR BOX
319	HYDRAULIC FILTER FOR GEAR BOX
320	GASKET FOR GEAR BOX
321	OIL SEAL FOR GEAR BOX
322	GEAR SHIFT KNOB
323	BOOT FOR GEAR SHIFT KNOB
324	RUBBER MOUNT FOR GEAR BOX
330	MISCELLANEOUS TRANSMISSION PARTS

Передняя ось(FRONT AXLE)	
400	FRONT AXLE/FRAME HEAD
401	TRACK CONTROL ARM/WISHBONE
402	RUBBER MOUNT, TRACK CONTROL ARM/WISHBONE
403	BALL JOINT
404	CONNECTING LINK
405	STABILIZER AND PARTS
406	GROMMET FOR STABILIZER
410	MISCELLANEOUS TRACK CONTROL ARM/WISHBONE PARTS
411	WHEEL BEARING HOUSING
412	WHEEL BEARING
413	WHEEL BEARING SET
414	WHEEL HUB
415	ROTOR FOR SPEED SENSOR, ABS
420	MISCELLANEOUS WHEEL BEARING PARTS
421	SHOCK ABSORBER
422	COIL SPRING/TORSION SPRING/LEAF SPRING
423	STRUT MOUNT
424	STRUT MOUNT WITH BEARING
425	SPRING SEAT
426	RUBBER STOP FOR SHOCK ABSORBER
427	BOOT FOR SHOCK ABSORBER
430	MISCELLANEOUS SUSPENSION PARTS
431	DRIVE SHAFT/DRIVE SHAFT, COMPLETE
432	CV JOINT, OUTER
433	CV JOINT KIT, OUTER
434	CV JOINT, INNER
435	CV JOINT KIT, INNER
436	AXLE BOOT, OUTER
437	AXLE BOOT, INNER
440	MISCELLANEOUS DRIVE SHAFT PARTS
442	STEERING GEAR
443	STEERING GEAR, POWER STEERING

444	TIE ROD
445	TIE ROD WITHOUT END (AXIAL JOINT)
446	TIE ROD END
447	PROTECTION BOOT/SLEEVE
448	RUBBER MOUNT FOR STEERING GEAR
449	JOINT SHAFT
450	STEERING DAMPER
451	POWER STEERING PUMP
452	OIL TANK FOR POWER STEERING
455	STEERING WHEEL
456	STEERING COLUMN AND PARTS
460	MISCELLANEOUS STEERING PARTS

Задняя ось(REAR AXLE)	
500	REAR AXLE BEAM
501	RUBBER MOUNT FOR REAR AXLE BEAM
502	TRACK CONTROL ARM/WISHBONE
503	RUBBER MOUNT, TRACK CONTROL ARM/WISHBONE
504	STABILIZER AND PARTS
505	CONNECTING LINK
510	MISCELLANEOUS REAR AXLE PARTS
511	WHEEL BEARING HOUSING
512	WHEEL BEARING
513	WHEEL BEARING SET
514	WHEEL HUB/STUB AXLE
515	ROTOR FOR SPEED SENSOR, ABS
520	MISCELLANEOUS WHEEL BEARING PARTS
521	SHOCK ABSORBER
522	COIL SPRING/TORSION BAR/LEAF SPRING
523	STRUT MOUNT
524	STRUT MOUNT WITH BEARING
525	SPRING SEAT
526	RUBBER STOP FOR SHOCK ABSORBER
527	BOOT FOR SHOCK ABSORBER
530	MISCELLANEOUS SUSPENSION PARTS
531	DRIVE SHAFT, COMPLETE
532	CV JOINT, OUTER
533	CV JOINT KIT, OUTER
534	CV JOINT, INNER
535	CV JOINT KIT, INNER
536	AXLE BOOT, OUTER
537	AXLE BOOT, INNER
538	JOINT, PROPELLER SHAFT
539	DRIVE SHAFT BEARING AND MOUNTING
540	MISCELLANEOUS DRIVE SHAFT PARTS

Колеса и тормозная система(WHEEL AND BRAKE)	
600	STEEL WHEEL
601	ALU WHEEL
602	WHEEL CAP
603	WHEEL COVER
604	WHEEL BOLTS/NUTS
610	MISCELLANEOUS WHEEL PARTS
611	MASTER BRAKE CYLINDER
612	BRAKE FLUID TANK AND CAP
613	WHEEL CYLINDER
614	BRAKE PRESSURE REGULATOR
615	BRAKE LINE
616	BRAKE HOSE FRONT
617	BRAKE HOSE REAR
618	BRAKE BOOSTER
619	BRAKE CALIPER FRONT
620	BRAKE CALIPER REAR
630	MISCELLANEOUS HYDRAULIC BRAKE PARTS
631	BRAKE DISC FRONT
632	BRAKE DISC REAR
633	BRAKE DISC CONVERSION KIT
634	BRAKE DRUM FRONT
635	BRAKE DRUM REAR
636	BRAKE PADS FRONT
637	BRAKE PADS REAR
638	BRAKE SHOES FRONT
639	BRAKE SHOES REAR
640	MOUNTING KIT FOR BRAKE
642	DUST PLATE FRONT
643	DUST PLATE REAR
650	MISCELLANEOUS MECHANICAL BRAKE PARTS

Трос ручника(CABLES, HANDBRAK)	E AND PEDAL
701	ACCELERATOR CABLE
702	CLUTCH CABLE
703	HANDBRAKE CABLE
704	CHOKE CABLE
705	HEATER CABLE
706	SPEEDOMETER CABLE
707	HOOD CABLE
708	FUEL FLAP RELEASE CABLE
709	GEAR SHIFT SELECTOR CABLE
710	BOWDEN CABLE
711	BACK REST CABLE
720	MISCELLANEOUS CABLE PARTS
721	PEDAL

722	PEDAL PAD
725	HAND BRAKE LEVER
726	HAND BRAKE LEVER HANDLE/BOOT
730	MISCELLANEOUS PEDAL/HAND BRAKE PARTS

Кузов(BODY)	
801	BONNET
802	TAILGATE
803	WING, FRONT
804	WING, REAR
805	FRONT PANEL
806	REAR PANEL
807	DOOR, FRONT
808	DOOR, REAR
809	DOOR PLATE
810	LOWER PANEL, OUTER
811	FUEL FLAP
812	GAS SPRING FOR HOOD
813	SOUND Baffle AND LINING
814	Convertible HOOD AND PARTS
815	RUNNING BOARD AND PARTS
816	INSCRIPTION/EMBLEM
817	JACK SUPPORT PANEL
818	HEATING CHANNEL
819	PILLAR AND PARTS
820	MISCELLANEOUS OUTER BODY PARTS
821	INNER FRONT PANEL
822	INNER REAR PANEL
823	INNER WHEEL HOUSE, FRONT
824	INNER WHEEL HOUSE, REAR
825	LOWER PANEL, INNER
826	ENGINE TIN
827	BATTERY BOX/TRAY
831	FLOOR PLATE
840	MISCELLANEOUS INNER BODY PARTS
841	FRONT BUMPER
842	REAR BUMPER
843	FRONT BUMPER CORNER AND MOULDING
844	REAR BUMPER CORNER AND MOULDING
845	GRILLE
850	MISCELLANEOUS BUMPER AND GRILLE PARTS
851	WINDSCREEN, FRONT/REAR
852	DOOR WINDOW, FRONT/REAR
853	SIDE WINDOW
854	SUNROOF AND PARTS
855	BONNET/TAILGATE SEAL
856	WING SEAL

857	DOOR SEAL
858	BODY SEAL
859	WINDSCREEN SEAL, FRONT/REAR
860	DOOR WINDOW SEAL, FRONT/REAR
861	SIDE WINDOW SEAL
862	WINDOW SEAL SET
865	BODY/WINDOW MOULDING
870	MISCELLANEOUS DOOR/HOOD/WINDOW PARTS
871	DOOR HANDLE, FRONT
872	DOOR HANDLE, REAR
873	HOOD HANDLE, FRONT/REAR
874	DOOR/BONNET/TAILGATE HINGE AND PARTS
875	DOOR LOCK, FRONT
876	DOOR LOCK, REAR
877	HOOD LOCK, FRONT/REAR
878	DOOR HANDLE, INNER, FRONT/REAR
879	KEY
880	MISCELLANEOUS HANDLE PARTS
881	WINDOW LIFTER, FRONT
882	WINDOW LIFTER, REAR
883	WINDOW WINDER HANDLE AND PARTS
884	WINDOW LIFTER MOTOR
886	ROLLER GUIDE FOR SLIDING DOOR
891	DOOR MIRROR
892	REARVIEW MIRROR
893	DOOR MIRROR GLASS
894	DOOR MIRROR HOUSE
895	CARPET AND LINING
896	SEAT BELT
897	AIR BAG
898	MISCELLANEOUS INTERIOR PARTS

Електророборудование(ELECTRICAL)	
901	ALTERNATOR/DYNAMO
902	VOLTAGE REGULATOR
903	STARTER
904	IGNITION SWITCH/LOCK
905	PULLEY FOR ALTERNATOR/DYNAMO
910	MISCELLANEOUS ALTERNATOR/STARTER PARTS
911	DISTRIBUTOR
912	DISTRIBUTOR CAP
913	ROTOR
914	HALL SENDER/IGNITION POINTS
915	CONDENSER FOR DISTRIBUTOR
916	IGNITION COIL/TRANSFORMER
917	SPARK PLUG
918	GLOW PLUG

919	SPARK PLUG CONNECTOR
920	IGNITION CABLE
921	SWITCH UNIT FOR TCI
930	MISCELLANEOUS DISTRIBUTOR PARTS
931	TEMPERATURE SENSOR FOR COOLING SYSTEM
932	THERMO SWITCH FOR COOLING SYSTEM
933	WATER LEVEL SWITCH
934	TEMPERATURE SENSOR FOR OIL
935	PRESSURE SWITCH FOR OIL
936	OIL LEVEL SWITCH
937	KNOCK SENSOR/IMPULSE SENDER
938	LAMBDA SENSOR
939	AIR METER AND THRUST SENSOR
940	THERMO SWITCH FOR FAN
941	TEMPERATURE SENSOR FOR AIR INTAKE
942	CRANKSHAFT SPEED SENSOR
950	MISCELLANEOUS ENGINE SENSOR/SWITCH PARTS
951	HEADLAMP
952	FOGLAMP FRONT/REAR
953	REAR LAMP
954	TURN SIGNAL FRONT/REAR
955	TURN SIGNAL SIDE
956	LICENSE PLATE LAMP
957	INTERIOR LAMP
959	BULB
960	MISCELLANEOUS LAMP PARTS
961	HEADLAMP SWITCH
962	TURN SIGNAL/WIPER SWITCH
963	EMERGENCY LIGHT SWITCH
964	REAR WINDOW DEFOGGER SWITCH
965	DOOR CONTACT SWITCH
966	REVERSE LIGHT/BRAKE LIGHT SWITCH
967	ELECTRIC WINDOW/MIRROR SWITCH
968	SWITCH FOR BLOWER
970	MISCELLANEOUS SWITCH PARTS
971	ABS SENSOR
972	DISTANCE SENSOR
973	BRAKE PAD SENSOR
974	OUTER TEMPERATURE SENSOR
975	PARKING SENSOR
980	MISCELLANEOUS SENSOR PARTS
981	WIPER MECHANISM
982	WIPER MOTOR
983	WIPER ARM
984	WIPER BLADE
985	WASHER PUMP
986	WASHER TANK/CAP

987	WASHER JET AND PIPES/HOSES
990	MISCELLANEOUS WIPER/WASHER PARTS
991	ELECTRIC FAN
992	RELAY
993	FUSE/FUSE BOX
994	BATTERY
995	HORN
996	GAUGES AND PARTS
999	MISCELLANEOUS ELECTRICAL PARTS

Аксессуары(Accessories)	
1	MUD FLAP
2	BULB/RELAY SET
3	BRAKE FLUID
4	GREASE
5	LIQUID SEAL
6	COOLANT
7	ENGINE OIL
8	TRANSMISSION OIL/POWER STEERING OIL
9	ANTENNA AND PARTS
10	BOLT
11	NUT
12	WASHER
13	CLAMP/GROMMET
14	KEY RING
15	STICKER
16	ROOF RACK
17	FLOOR MAT
18	RADIO
19	CAR COVER
20	TOW BAR
21	SCULPTURE
22	MODEL CAR
23	PAINT
50	TOOLS

Премиум бренд	
AC DELCO	KNECHT
ATE	KOSTAL
BEHR	KRÄCKER
BENDIX	KS
BERU	LITENS
BILSTEIN	LUK
BOGE	MAGNETI MARELLI (Cofap)
BOSCH	MAHLE
BREMBO	MANN
BROSOL	NGK
CONTITECH	OE MEXICO
DELPHI	OPTIBELT
DUNLOP	ORIGINAL
ELRING	PAGID
ERNST	PIERBURG
FAG	REINZ
FEP	SACHS
GATES	SIEMENS
GNK	SKF
HELLA	SWF
HENGST	TRW
HITACHI	VALEO
HÜCO	VDO
INA	