

Telephone:
 Fax:
 VAT Registration No.:

1	Accelerator pedal position (APP) sensor 1/2 - above pedal
2	Brake pedal position (BPP) switch 1/2 - above pedal
3	Camshaft position (CMP) actuator 1 - inlet
4	Camshaft position (CMP) actuator 2 - inlet
5	Camshaft position (CMP) actuator 3 - exhaust
6	Camshaft position (CMP) actuator 4 - exhaust
7	Camshaft position (CMP) sensor 1 - inlet
8	Camshaft position (CMP) sensor 2 - inlet
9	Camshaft position (CMP) sensor 3 - exhaust
10	Camshaft position (CMP) sensor 4 - exhaust
11	Clutch pedal position (CPP) switch - above pedal
12	Crankshaft position (CKP) sensor
13	Data link connector (DLC) - fascia, driver's side
14	Engine control module (ECM) - engine bay relay plate - LHD
15	Engine control module (ECM) - engine bay relay plate - RHD
16	Engine coolant temperature (ECT) sensor
17	Engine control (EC) relay - LHD
18	Engine control (EC) relay - RHD
19	Evaporative emission (EVAP) canister purge valve
20	Exhaust gas control solenoid - load area, behind LH trim
21	Fuel filter - tank exterior
22	Fuel pressure regulator
23	Fuel pump - in tank
24	Fuel pump relay - fascia relay plate 2
25	Heated oxygen sensor (HO2S) 1, bank 1 - before cat
26	Heated oxygen sensor (HO2S) 2, bank 1 - after cat
27	Heated oxygen sensor (HO2S) 1, bank 2 - before cat
28	Heated oxygen sensor (HO2S) 2, bank 2 - after cat
29	Ignition amplifiers
30	Ignition coils
31	Injectors 1-3
32	Injectors 4-6
33	Intake air temperature (IAT) sensor - in MAF sensor
34	Intake manifold air control solenoid
35	Knock sensor (KS) 1
36	Knock sensor (KS) 2
37	Mass air flow (MAF) sensor
38	Secondary air injection (AIR) pump
39	Secondary air injection (AIR) pump relay - engine bay relay plate - LHD
40	Secondary air injection (AIR) pump relay - engine bay relay plate - RHD
41	Secondary air injection (AIR) solenoid
42	Throttle control unit

43	Throttle motor
44	Throttle motor position sensor 1/2
45	Vehicle speed sensor (VSS) - transmission

