


Symphony

- 1 - Multi-pin connector IV, 10-pin, (T10I) red
- 2 - Multi-pin connector I, 20-pin, (T20d) black
- 3 - Device fuse
- 4 - Multi-pin connector III, 8-pin, (T8) black
- 5 - Multi-pin connector II, 8-pin, (T8a) brown
- 6 - IF connection (yellow) to Antenna Selection Control Module - J515-/Left Antenna Module -R108-
- 7 - HF connection (black) to Antenna Selection Control Module - J515-/Left Antenna Module -R108-

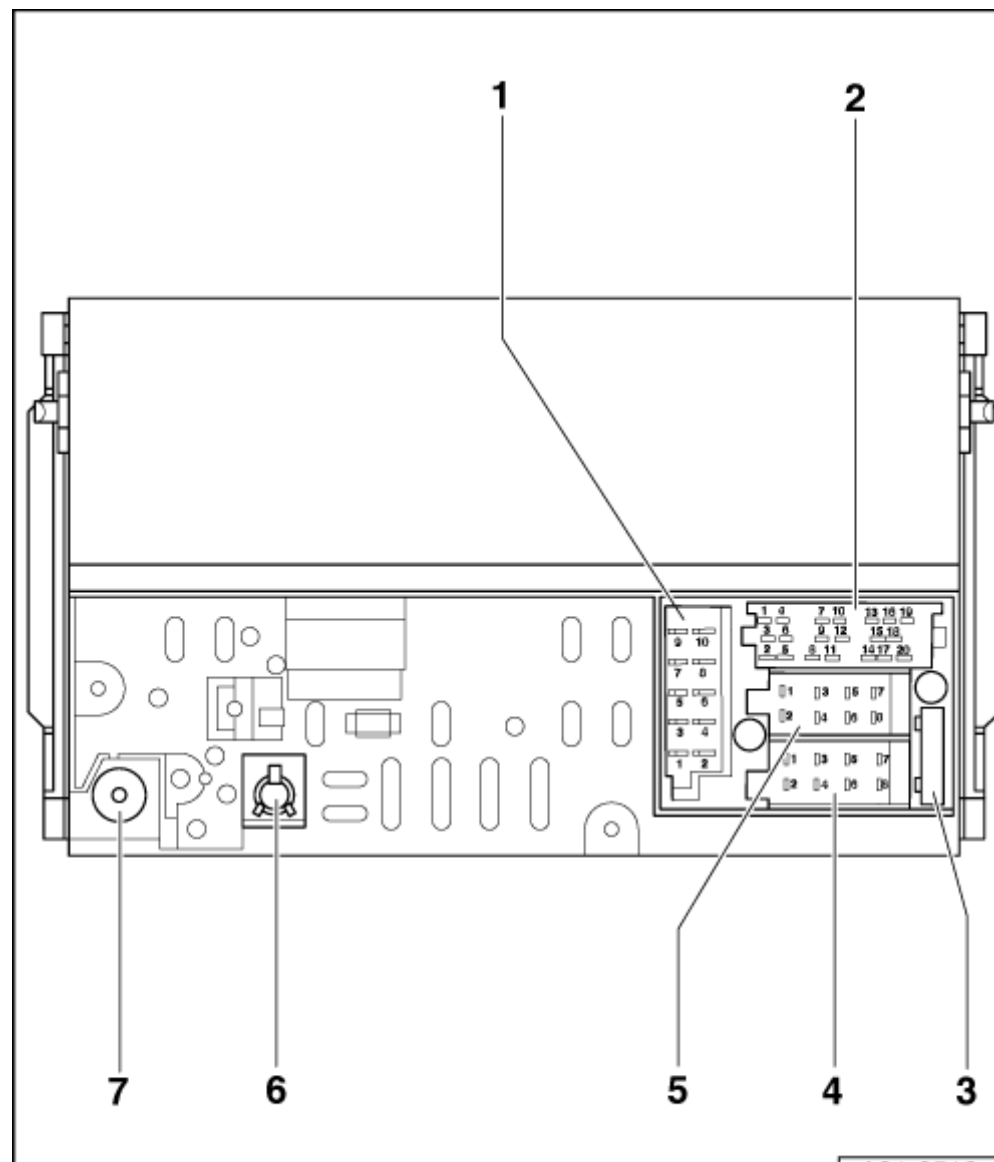


A91-0512

**Note**

Unlisted connector terminals are not assigned.


1 - Multi-pin connector IV, 10-pin, (T10I) red

- 1 - NF mute from Telephone Transceiver -R36-/preliminary setup for cell phone package
- 3 - NF (+) from Telephone Transceiver -R36- (not with Nav IV)/preliminary setup for cell phone package
- 4 - NF (-) from Telephone Transceiver -R36- (not with Nav IV)/preliminary setup for cell phone package
- 5 - NF (+) from Navigation System with CD Drive Control Module -J401- (only with Nav IV)
- 6 - NF (-) from Navigation System with CD Drive Control Module -J401- (only with Nav IV)
- 7 - Navigation control wire from Navigation System with CD Drive Control Module -J401- (only with Nav IV)

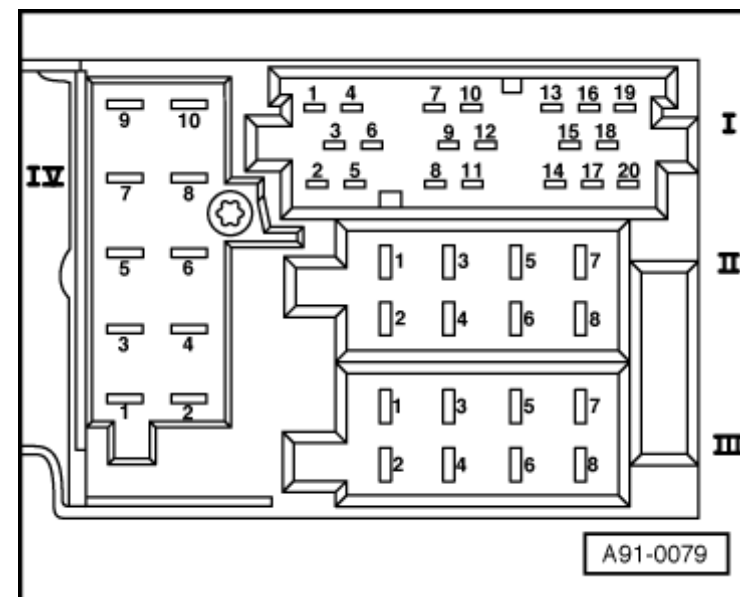**2 - Multi-pin connector I, 20-pin, (T20d) black**


- 1 - Left rear signal to Amplifier -R12-
- 2 - Right rear signal to Amplifier -R12-
- 3 - Signal ground to Radio -R12-
- 4 - Left front signal to Amplifier -R12- (only with BOSE®)
- 5 - Right front signal to Amplifier -R12- (only with BOSE®)
- 6 - Positive switched to Amplifier -R12-
- 7 - CAN-Bus High (Infotainment)
- 10 - CD ground to CD Changer -R41-
- 12 - CAN-Bus Low (Infotainment)
- 13 - CD data in from CD Changer -R41-

- 14 - CD data out to CD Changer -R41-
- 15 - CD CLK from CD Changer -R41-
- 16 - Permanent positive to CD Changer -R41-
- 17 - Positive switched to CD Changer -R41-
- 18 - CD ground to CD Changer -R41-
- 19 - Left signal from CD Changer -R41-
- 20 - Right signal from CD Changer -R41-

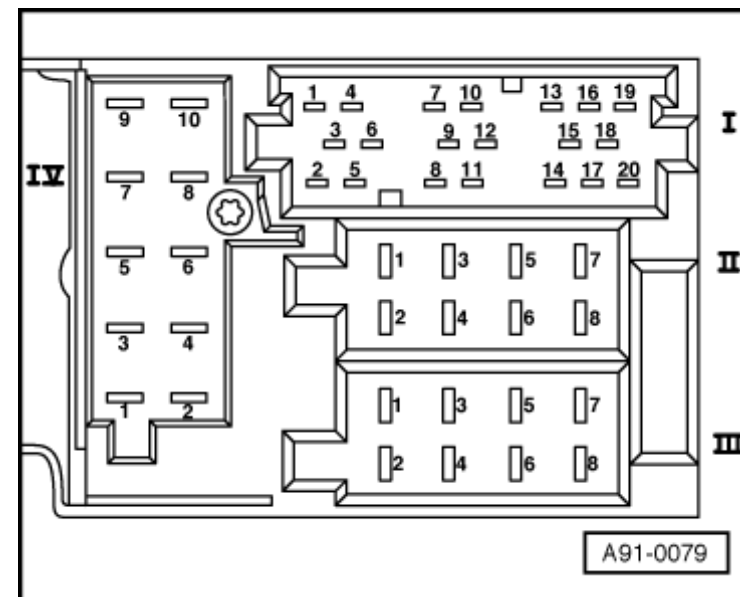

4 - Multi-pin connector III, 8-pin, (T8) black

- 1 - BOSE® coding to ground (only with BOSE®)
- 2 - Anti-theft warning system ground from Comfort System Central Control Module -J393-
- 3 - L-diagnostic
- 7 - Terminal 30
- 8 - Terminal 31

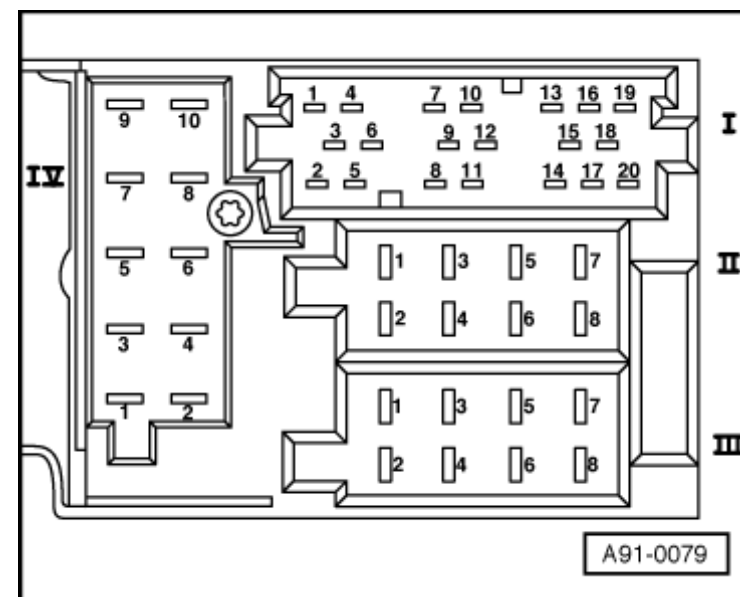

5 - Multi-pin connector II, 8-pin, (T8a) brown

- 3 - Right front speaker (+) (not with BOSE®)
- 4 - Right front speaker (-) (not with BOSE®)
- 5 - Left front speaker (+) (not with BOSE®)
- 6 - Left front speaker (-) (not with BOSE®)

