


Radio

- Chorus
- Concert
- Symphony

From model year 2002

Fuse box

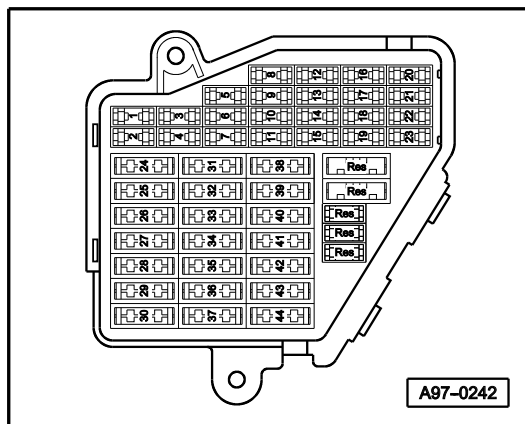

t Dash panel, driver's side

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown


5 A - beige




Note:

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

4-point relay carrier with screw connection

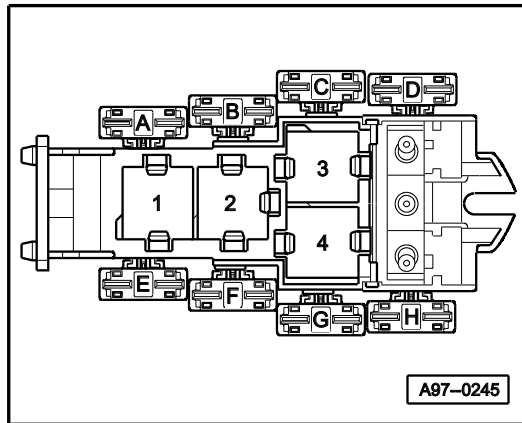

t Dash panel, driver's side

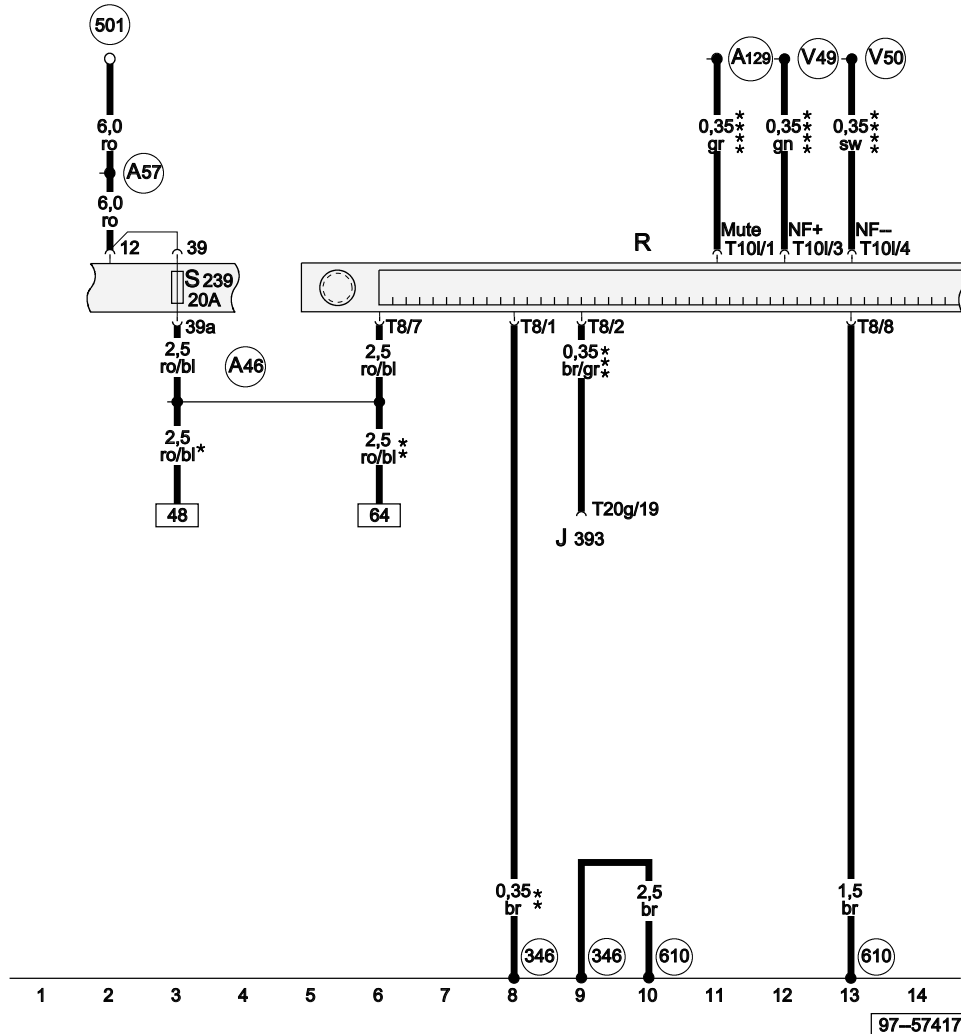

Voltage supply

J393 - Convenience system central control unit

R - Radio

S239 - Fuse in fuse box

T8 - 8-pin connector, black, radio connector III

T101 - 10-pin connector, red, radio connector IV

T20g - 20-pin connector, red, on convenience system central control unit (used to be connector 4)

346 - Earth connection (audio), in dash panel wiring harness

501 - Screw connection -2- (30), on relay plate

610 - Earth point (audio), below centre console, front

A46 - Positive (+) connection (30 - from radio), in dash panel wiring harness

A57 - Positive (+) connection -3- (30), in dash panel wiring harness

A129 - Connection (muting), in dash panel wiring harness

V49 - Connection (low frequency, NF +), in communication wiring harness


V50 - Connection (low frequency, NF -), in communication wiring harness

* - Applies to active loudspeakers only

** - Applies to Bose loudspeakers only

*** - Applies to anti-theft alarm system only

**** - Only applies to models with telephone/telematics or provision for mobile phone

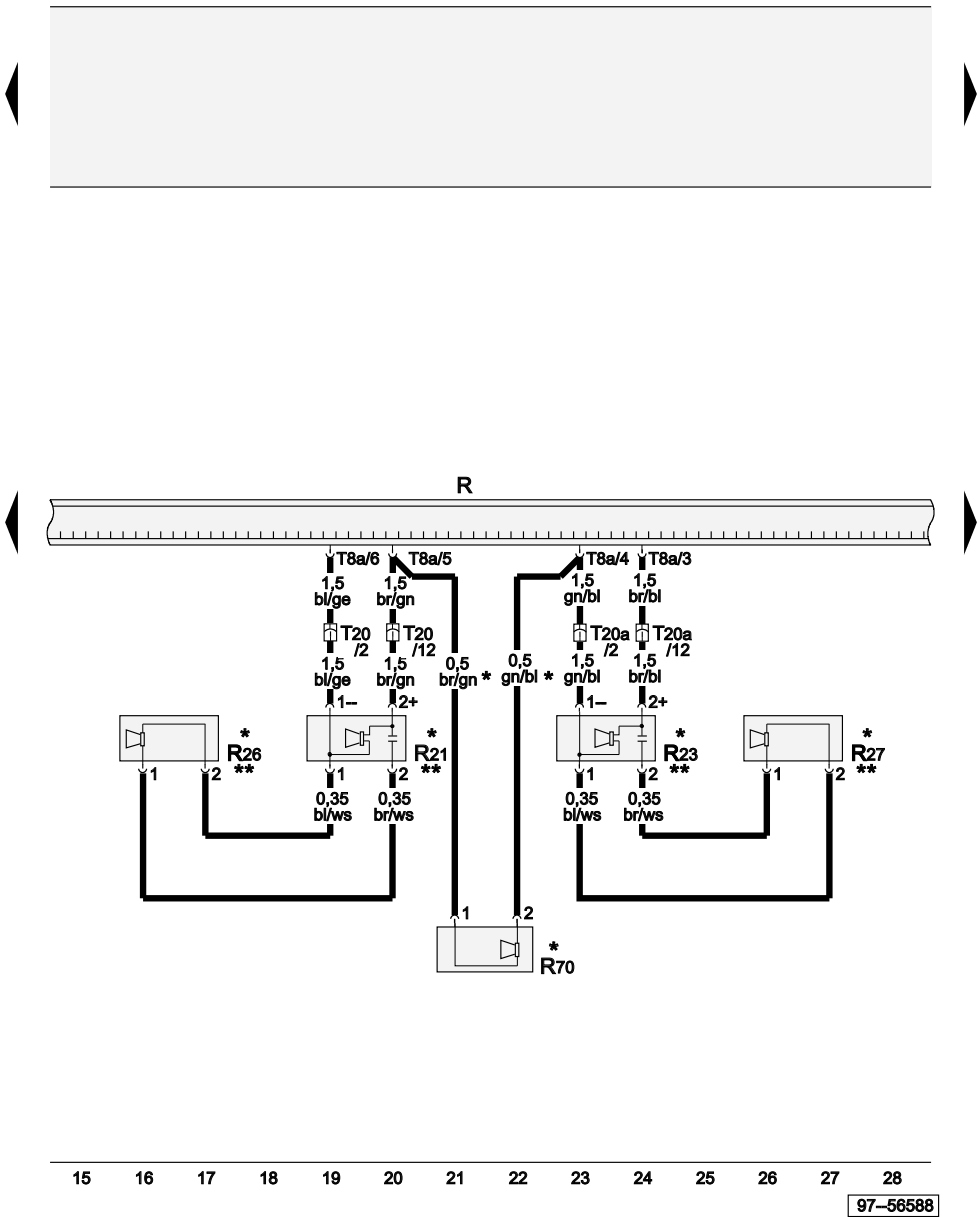

Front loudspeakers

R - Radio 

R21 - Bass loudspeaker, front left

R23 - Bass loudspeaker, front right

R26 - Mid-range/treble loudspeaker, front left

R27 - Mid-range/treble loudspeaker, front right

R70 - Internal loudspeaker (centre loudspeaker)



T8a - 8-pin connector, brown, radio connector II

T20 - 20-pin connector, black, door, A pillar, left

T20a - 20-pin connector, black, door, A pillar, right

* - Only applies to models with active loudspeakers

** - Only applies to models with passive loudspeakers

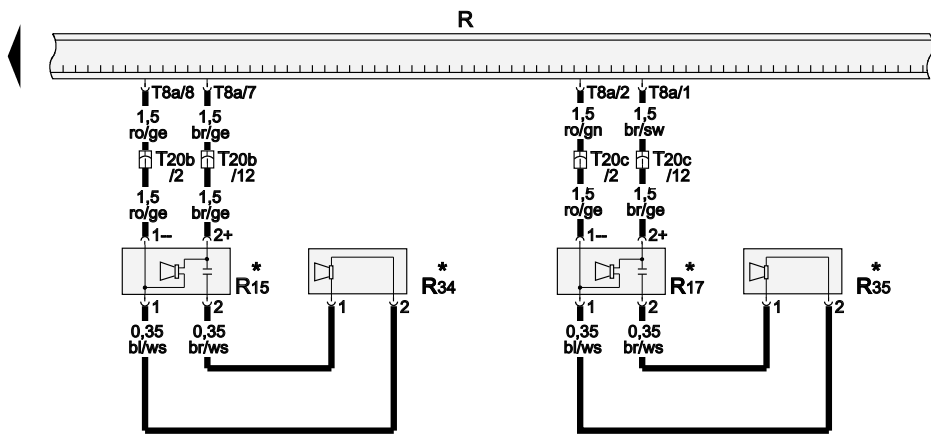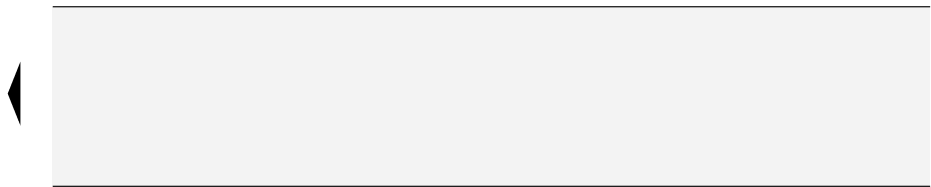

Rear loudspeakers

R - Radio 

R15 - Bass loudspeaker, rear left

R17 - Bass loudspeaker, rear right

R34 - Mid-range/treble loudspeaker, rear left

R35 - Mid-range/treble loudspeaker, rear right


T8a - 8-pin connector, brown, radio connector II

T20b - 20-pin connector, black, door, B pillar, left

T20c - 20-pin connector, black, door, B pillar, right

* - Only applies to models with passive loudspeakers

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

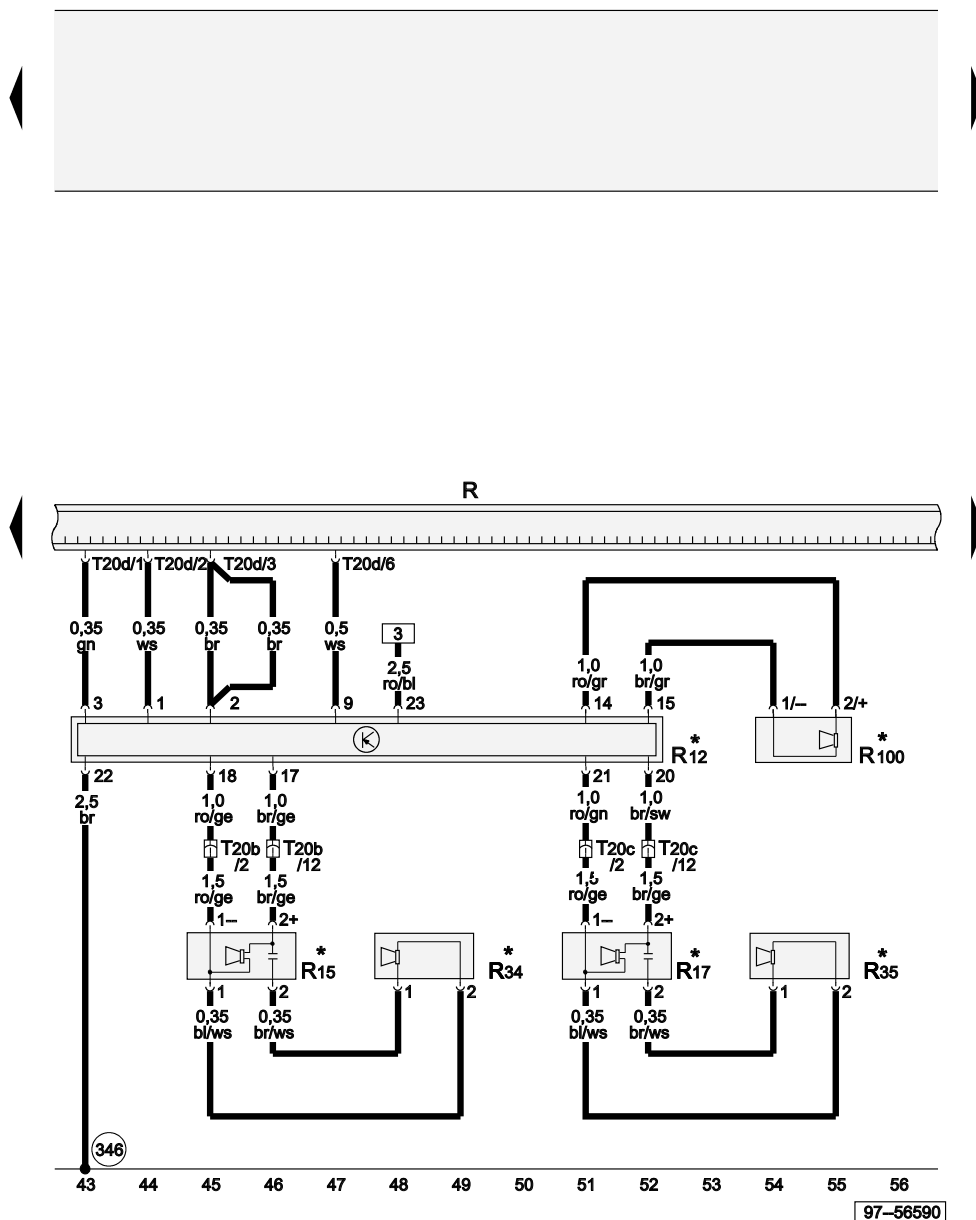

Active loudspeakers, rear

R - Radio

R12 - Amplifier

R15 - Bass loudspeaker, rear left

R17 - Bass loudspeaker, rear right

R34 - Mid-range/treble loudspeaker, rear left

R35 - Mid-range/treble loudspeaker, rear right


R100 - Bass loudspeaker

T20b - 20-pin connector, black, door, B pillar, left

T20c - 20-pin connector, black, door, B pillar, right

T20d - 20-pin connector, black, radio connector I

346 - Earth connection (audio), in dash panel wiring harness

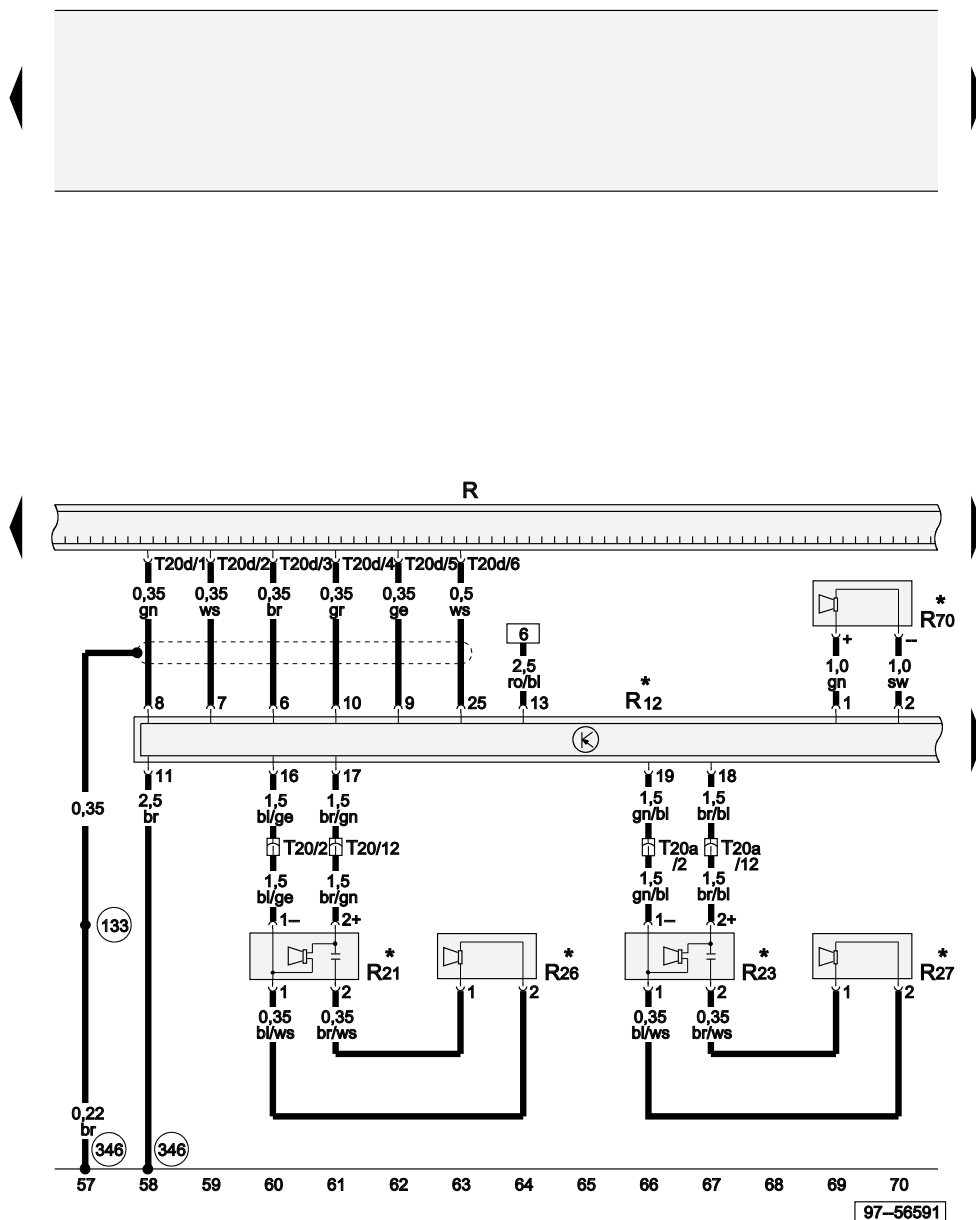

Bose loudspeakers, front

R - Radio

R12 - Amplifier

R21 - Bass loudspeaker, front left

R23 - Bass loudspeaker, front right

R26 - Mid-range/treble loudspeaker, front left

R27 - Mid-range/treble loudspeaker, front right

R70 - Internal loudspeaker (centre loudspeaker)


T20 - 20-pin connector, black, door, A pillar, left

T20a - 20-pin connector, black, door, A pillar, right


T20d - 20-pin connector, black, radio connector I

133 - Earth connection, in loudspeaker wiring harness

346 - Earth connection (audio), in dash panel wiring harness

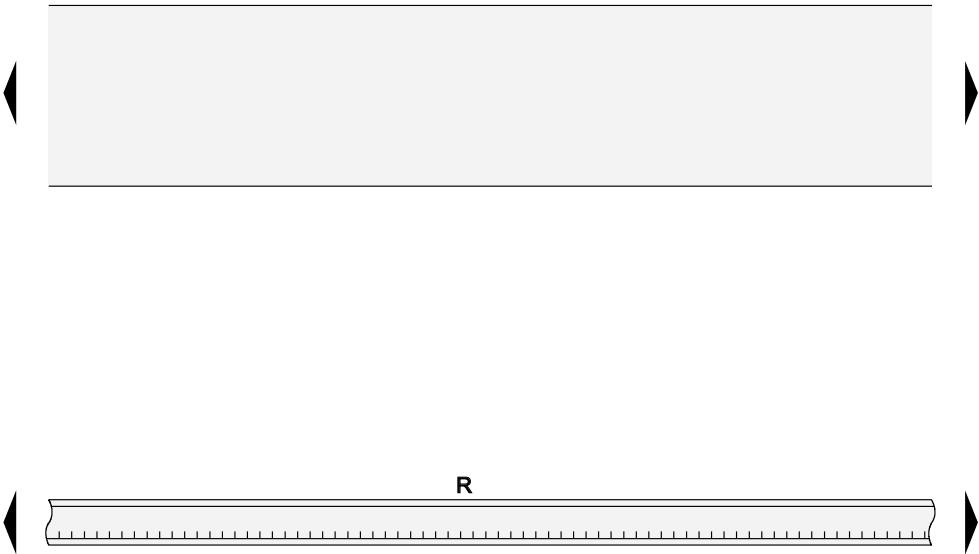

- Bose loudspeakers, rear
- R - Radio 
 - R12 - Amplifier
 - R15 - Bass loudspeaker, rear left
 - R17 - Bass loudspeaker, rear right
 - R34 - Mid-range/treble loudspeaker, rear left
 - R35 - Mid-range/treble loudspeaker, rear right
 - R100 - Bass loudspeaker
 - T20b - 20-pin connector, black, door, B pillar, left
 - T20c - 20-pin connector, black, door, B pillar, right
 - * - Only applies to models with Bose sound system

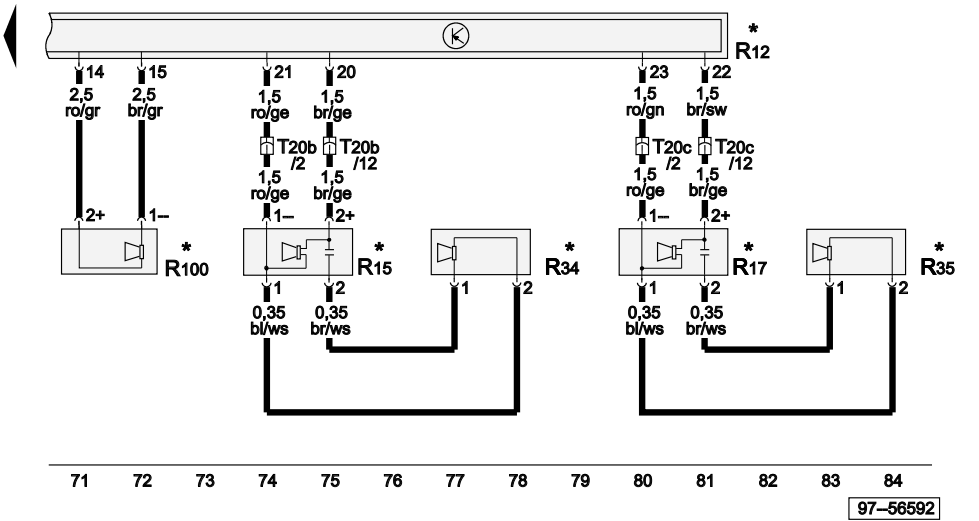



CD changer

R - Radio

R41 - CD changer


T20d - 20-pin connector, black, radio connector I

309 - Earth connection -1-, screening, in CD changer wiring harness


310 - Earth connection -2-, screening, in CD changer wiring harness

V14 - Connection (screening), in CD changer wiring harness

* - Only applies to models with CD changer

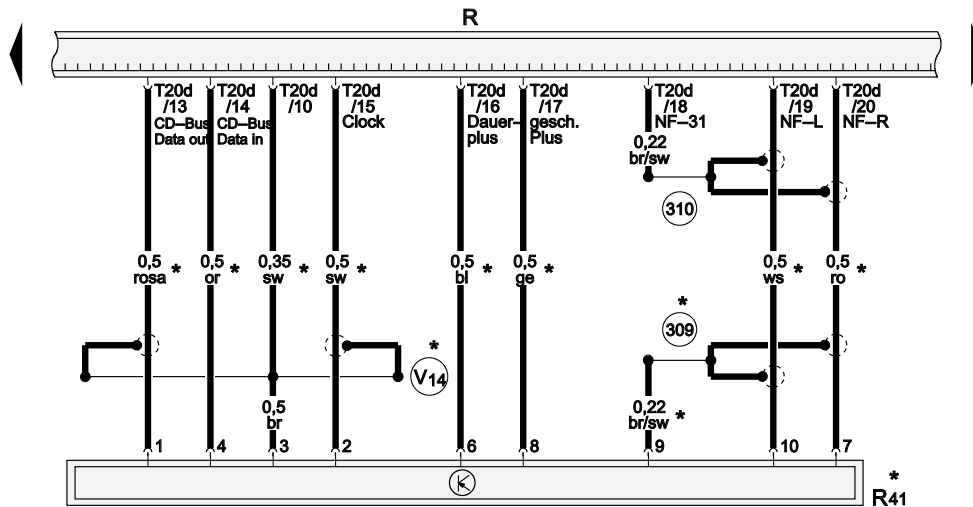

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

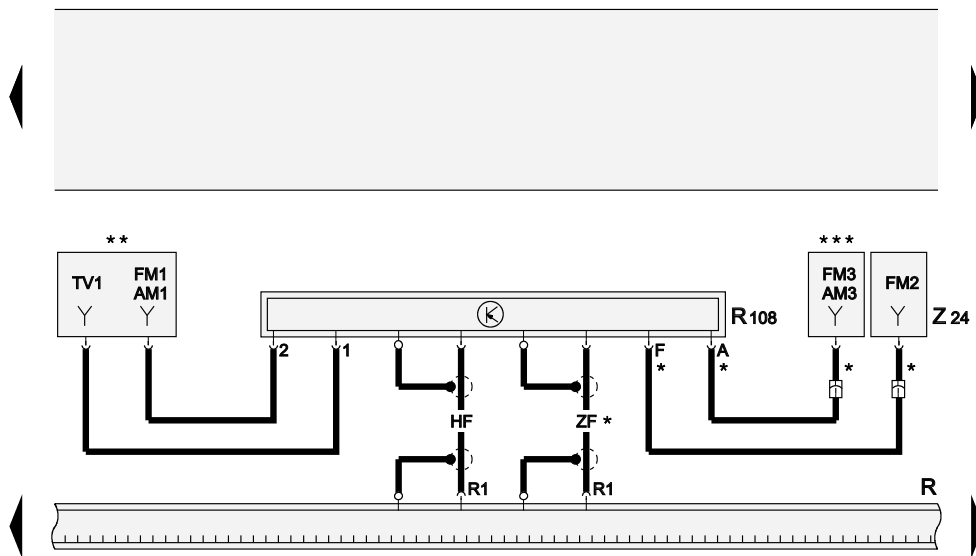

Aerial (Avant models)

R - Radio 

R1 - Aerial connection

R108 - Aerial module, left


Z24 - Heated rear window with window aerial

* - Only applies to models with radio Concert or Symphony

** - Side window, rear left

*** - Side window, rear right

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

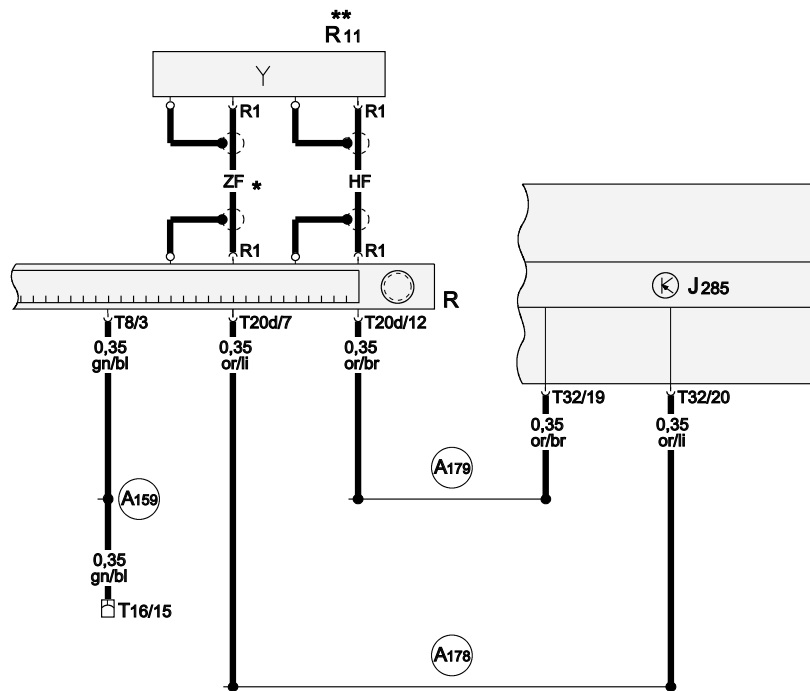

Aerial (saloon models), diagnostic connector, CAN bus
J285 - Control unit with display in dash panel insert

R - Radio

R1 - Aerial connection

R11 - Aerial

T8 - 8-pin connector, black, radio connector III

T16 - 16-pin connector, black, diagnostic connector

T20d - 20-pin connector, black, radio connector I

T32 - 32-pin connector, blue, on dash panel insert

A159 - Connection (L), in dash panel wiring harness

A178 - Connection (infotainment CAN bus, high), in dash panel wiring harness

A179 - Connection (infotainment CAN bus, low), in dash panel wiring harness

* - Does not apply to radio Chorus

** - Aerial for saloon models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink