


Telephone:

Fax:

VAT Registration No.:

A16	ABS control module
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S57	Closed throttle position (CTP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
B75	Engine speed (RPM) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
K94	Oxygen sensor heater relay
B147	Throttle position (TP) sensor
X79	Transmission connector
A57	Transmission control module (TCM)
S249	Transmission shift position switch
B33	Vehicle speed sensor (VSS)

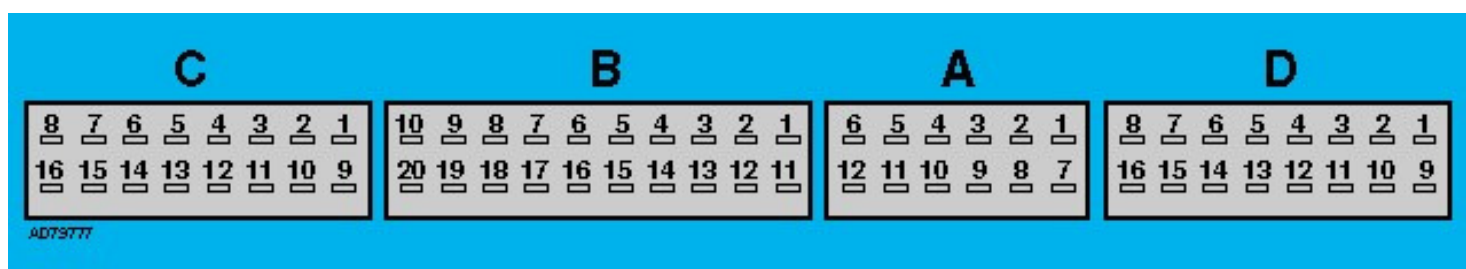

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE:** In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

