
Rear Brake Caliper Pistons


Special tools and workshop equipment required

- Piston Compressing And Extracting Tool -3272-
- Wedge -3409-


Unscrewing Piston From Brake Caliper Housing Using -3272-

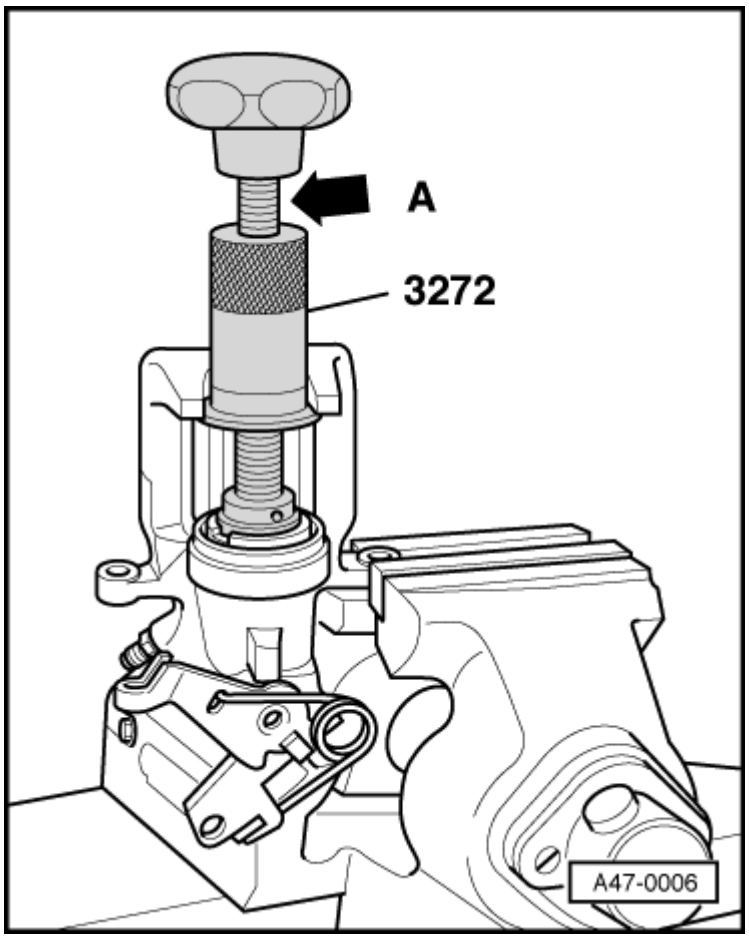

Installing Protective Seal With Outer Sealing Lip Onto Piston

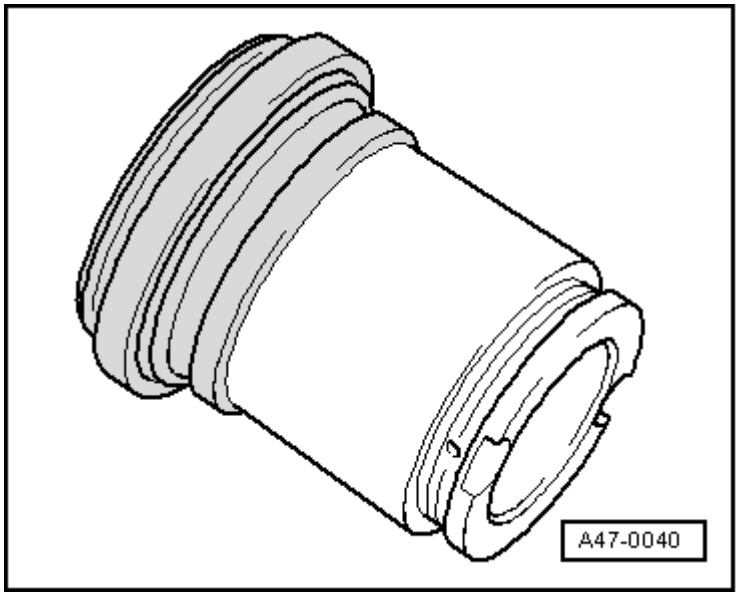


Use -3409- To Remove Seal

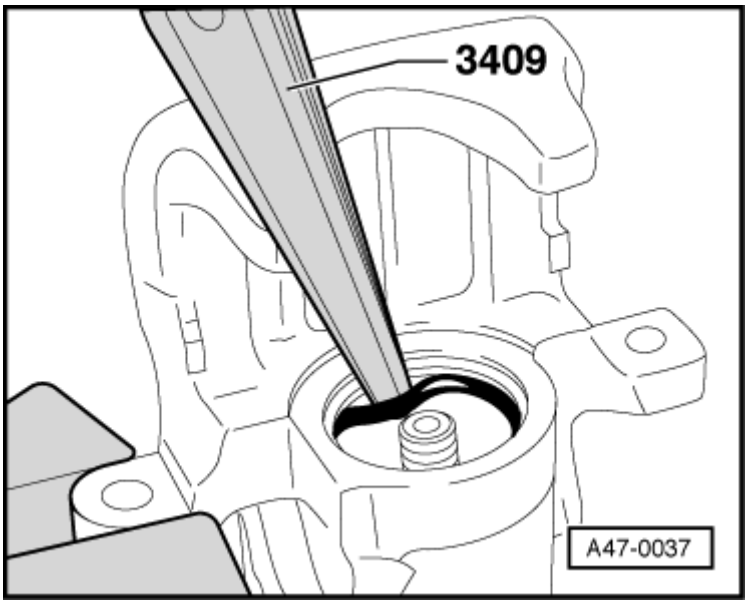

Inserting Inner Sealing Lip Of Protective Seal Into Groove In Brake Caliper Housing Using -3409-

Note

Hold piston in front of the brake caliper housing when performing this step.

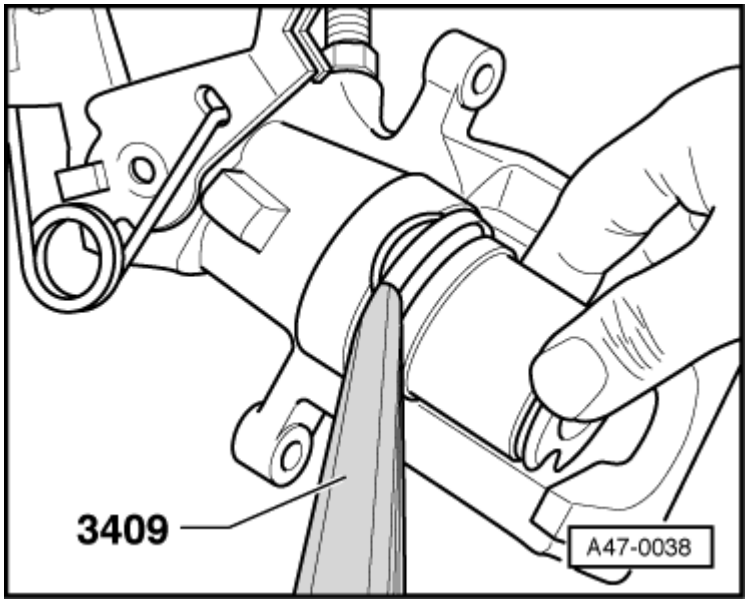



Turning Piston Into Brake Caliper Housing Until Fully Seated

– When screwing in, press firmly on the piston.

Note

The outer sealing lip of the protective seal will then locate in the piston groove.

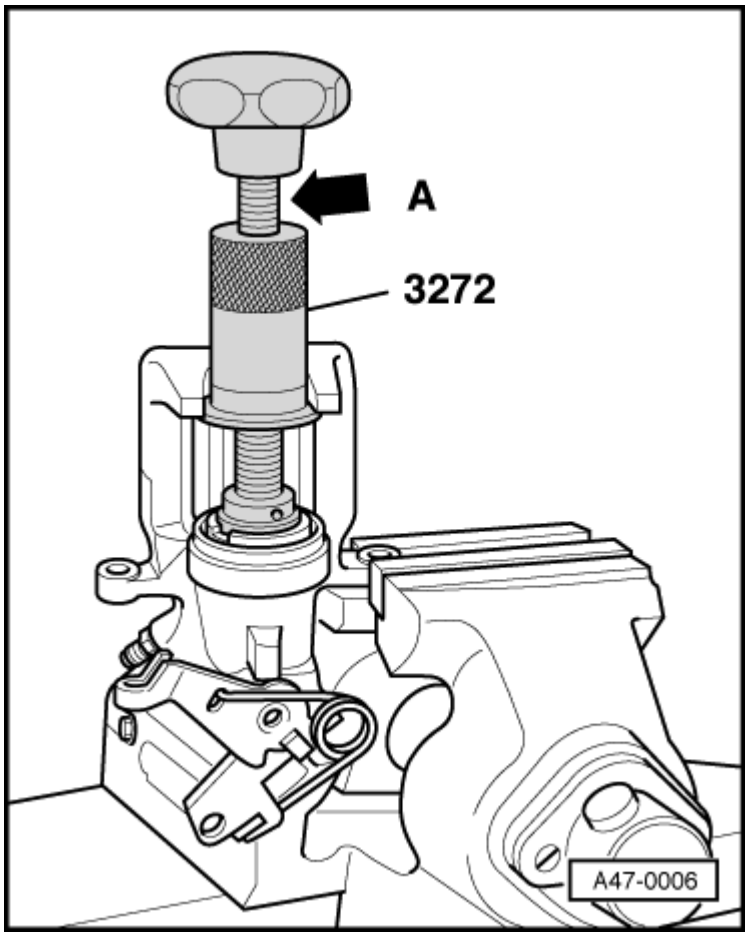

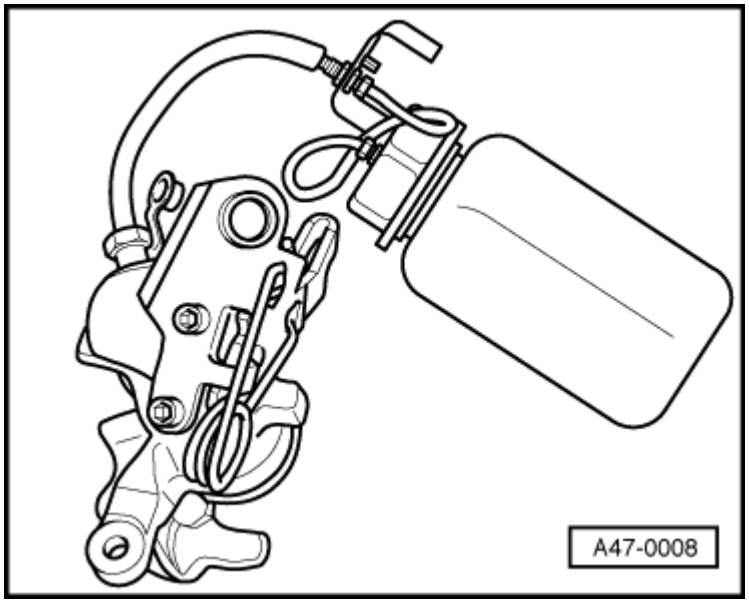

Pre-Bleeding Brake Caliper

Note

Position brake caliper upright for pre-bleeding, as shown.

– Open bleeder valve and fill with brake fluid, using commercially available bleeder bottle, until brake fluid flows out of threaded hole (brake hose connection) free of bubbles.

– Close bleeder valve.