
Assignment of contacts at multi-pin connectors - Vehicles up to Model Year 1999

32-pin blue connector


1 - Terminal 15
2 - Right turn signal
3 - Speedometer output 1
4 - Not used
5 - Fuel gauge sender
6 - Airbag
7 - Terminal 31 (sensor earth)
8 - Coolant temperature
9 - Terminal 31 (load earth)
10 - Oil pressure switch
11 - Engine speed signal
12 - Terminal 61
13 - Glow period warning lamp
14 - Adaptive suspension
15 - Terminal 58d
16 - Trailer turn signal/engine electrics malfunction
17 - Main beam
18 - Left turn signal
19 - ABS
20 - Terminal 58s
21 - Driver's door contact
22 - Low coolant
23 - Terminal 30
24 - Terminal 31 (load earth)
25 - K-wire
26 - Right parking light
27 - Left parking light
28 - Speedometer input
29 - Brake fluid level/pressure
30 - S-contact
31 - Belt buckle
32 - ESP

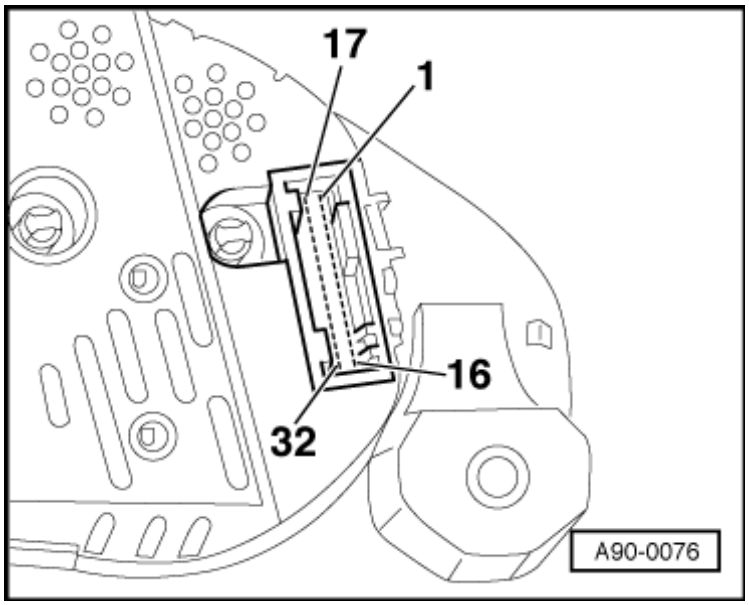

32-pin green connector

1 - Not used
2 - Transponder 1
3 - Not used
4 - Immobilizer
5 - W-wire

6 - Rear lid (Midline version only)
7 - Brake lining (Highline version only)
8 - Not used
9 - Not used
10 - Tank warning (6-cylinder TDI only)
11 - Standing time output
12 - Air conditioner shutoff
13 - Parking brake
14 - Electronic throttle
15 - Side light
16 - Not used
17 - Transponder 2
18 - Not used
19 - Not used
20 - Not used
21 - Oil temperature
22 - Not used
23 - Not used
24 - Not used
25 - Not used
26 - Not used
27 - Not used
28 - Not used
29 - Terminal 58d
30 - Speedometer output 2
31 - Not used
32 - Not used

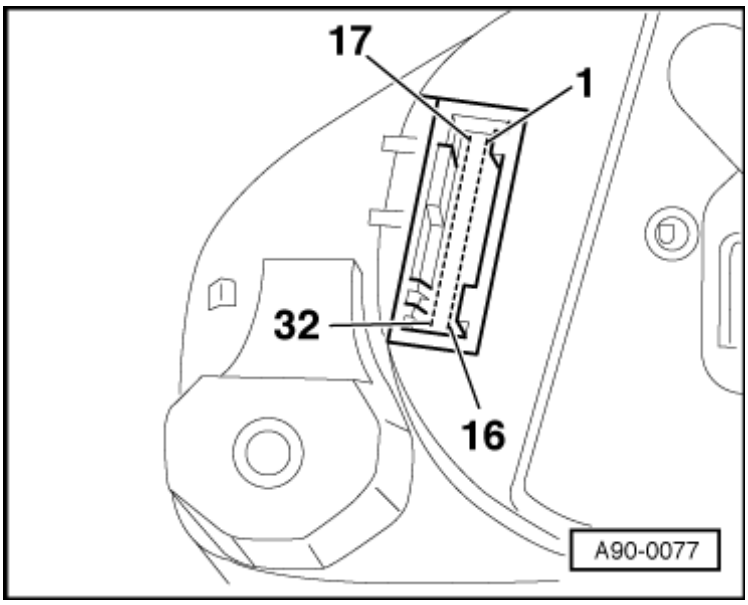

20-pin red connector

1 - Consumption signal
2 - Not used
3 - Not used
4 - Not used
5 - Ambient temperature
6 - Selector lever position indicator
7 - Not used
8 - Not used
9 - Low washer fluid
10 - Hydraulic pressure
11 - Driver information system reset
12 - Clock signal for radio frequency display

13 - Data signal for radio frequency display
14 - On-board computer, left
15 - Enable signal for radio frequency display
16 - Tail light/dipped beam (bulb check)
17 - Glow plug relay (TDI)
18 - Driver information system, right
19 - Brake light
20 - Not used

