Removing and installing upper links

Removing

– Remove suspension strut → Chapter.


– Loosen nuts -1- and take out bolts -2-.

– Take out links -3- and -4-.

Installing

– Secure upper links -3- and -4- with bolts -2- and nuts -1-, but only tighten lightly, so that position of links can still be changed.


Upper link (front)

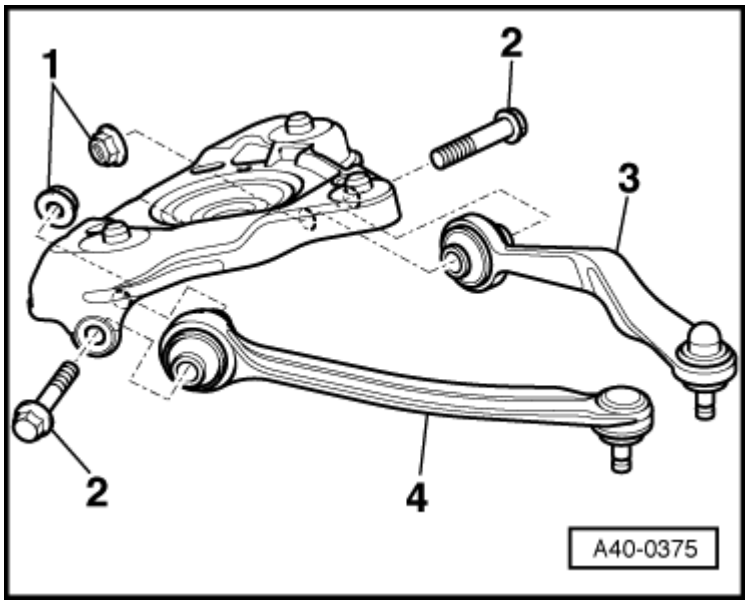

– Adjust height -A-.

A = 81 mm ± 2 mm


Upper link (rear)

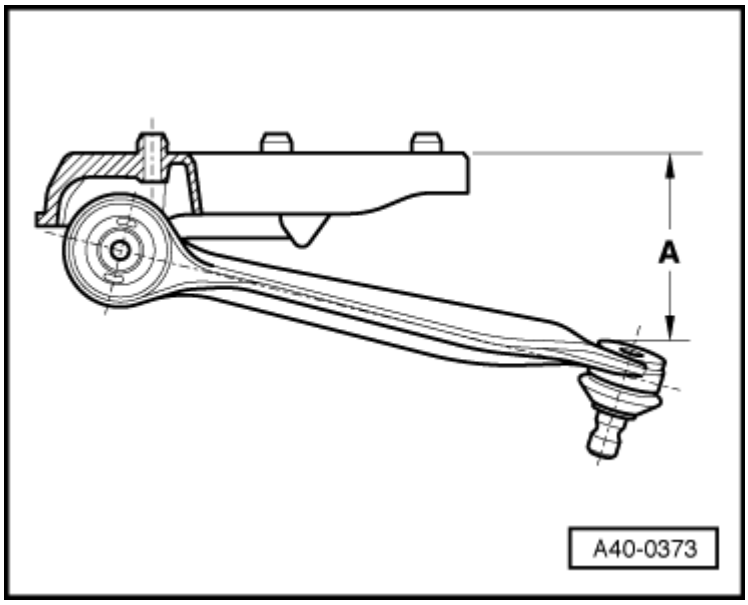

– Adjust height -A-.

A = 70 mm ± 2 mm

Continued for upper links (front and rear)

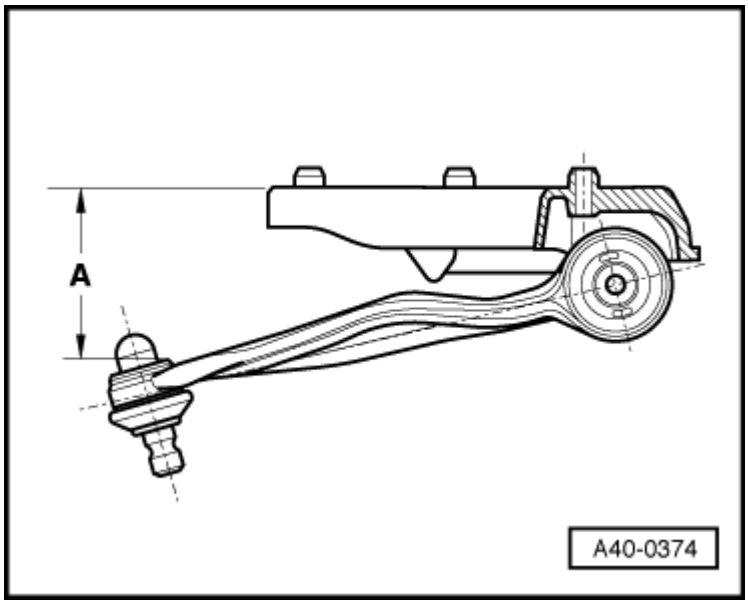

– Tighten new nuts -1- → Item.
– Check positions of upper links.
– Repeat adjustment if necessary.
– Re-install mounting bracket → Chapter.

