

WIRING DIAGRAMS

Fig. 1: Engine Compartment & Headlights (Grid 1-3)

1992 Audi 100


For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:22PM

COMPONENT LOCATOR:

A/C COMP CLUTCH RELAY	A 33
A/C RELAY	E 29, E 34
A/C SYSTEM (AUTO)	A-E 32-35
A/C SYSTEM (MANUAL)	C-E 28-31
ABS SYSTEM	A-C 12-15
AIR PUMP RELAY	D 4
AIRBAG SYSTEM	B-C 44-46
ALTERNATOR	B 3
AUTO SHIFT LOCK CONTROL UNIT	E 8
AUX RELAY PANEL #1	E 44-46
AUX RELAY PANEL #2	D 44-45
AUX RELAY PANEL #3	D 46-47
BACK-UP LT SW	D 51
BATTERY	A 2
C/E PANEL LAYOUT	D 17-19
CB #43	A 43
CB #64	D 17
CB #64	E 50
CB #72	E 4
CB #73	B 18
CB #74	D 17
CB #84	D 22
CB #85	B 50
CB #87	B 16
CB #89	A 43
CENTRAL ELECTRIC (C/E) PANEL	C 16-22
CENTRAL LOCKING/ALARM CONTROL UNIT	C-D 48
CIG LTR	B 27
COMBINATION SW	A 20-21
COMPUTER DISPLAY UNIT	E 42
COOLANT FAN SYSTEM	E 20-21, E 32-35
COOLANT FC RELAY	E 20
CRUISE CONTROL SYSTEM	A-D 20-31
DATA LINK CONN (DLC)	C 4
DEFOGGER SW	A 44
DIFFERENTIAL LOCK SYSTEM	C-E 12-15
DOOR HANDLE SWS	B-C 50
DOOR LOCK SW	D 50
DOOR SWS	E 48-49
EAP FREQUENCY VALVE	D 6
ELECTRONIC THERMOSW	C 36
ENGINE COMP LT	D 2
ENGINE CONTROL MODULE (ECM)	A-D 7
FLASHER SW	A 23
FOG LT RELAY	C-D 27
FOG LT SWS	E 22-23
FOOTWELL LTS	B 49
FRESH AIR BLOWER SW	C-D 31
FRESH AIR RECIRC VALVE	D 28, A 32
FRONT INTERIOR LTS	A-B 48
FUEL PUMP	B 18
FUSE #42	D 20
FUSE PANEL (F/P)	A-E 24-25
GEAR SELECT DISPLAY	A 11
GEAR SELECT SW	C 8
GLOVE COMPT LT	A 27
HAZARD FLASHER	A 22
HORN SW	B 17
IGNITION COILS	E 6
IGNITION SW	A 16-17
INSTRUMENT CLUSTER	A-E 36-39
LEFT FRONT DOOR SW	E 48
LIGHT SW	A 18-19
LUGGAGE COMPT LT	E 48-49
MAP SENSOR	A 4
MIL LT	C 5
OUTSIDE AIR TEMP DISPLAY	A 35
POWER MIRRORS	A-B 45-47
POWER WINDOW CONTROL MODULE	A 40
POWER WINDOW SYSTEM	A-D 40-43
READING LTS	A 50
REAR CIG LTR	D 40-41
REAR LT CONTROL MODULE	B-C 51
SEAT BELT WARNING CONTROL MODULE	E 19
SEAT BELT WARNING LT	E 17
SELECTOR LT LEVER RELAY	E 9-10
STARTER	A 3
STOP LT SW	D 8
TRANSMISSION CONTROL UNIT (TCU)	B-D 11
TRUNK LID RELEASE	E 48-49
VANITY MIRRORS	B-C 47
VEHICLE SPEED SENSOR	A 36
WASHER NOZZLE HEATERS	E 2
WINDOW LOCKOUT SW	C-D 40-41
WIPER MOTOR	E 3
WIPER WASHER SW	A 20-21

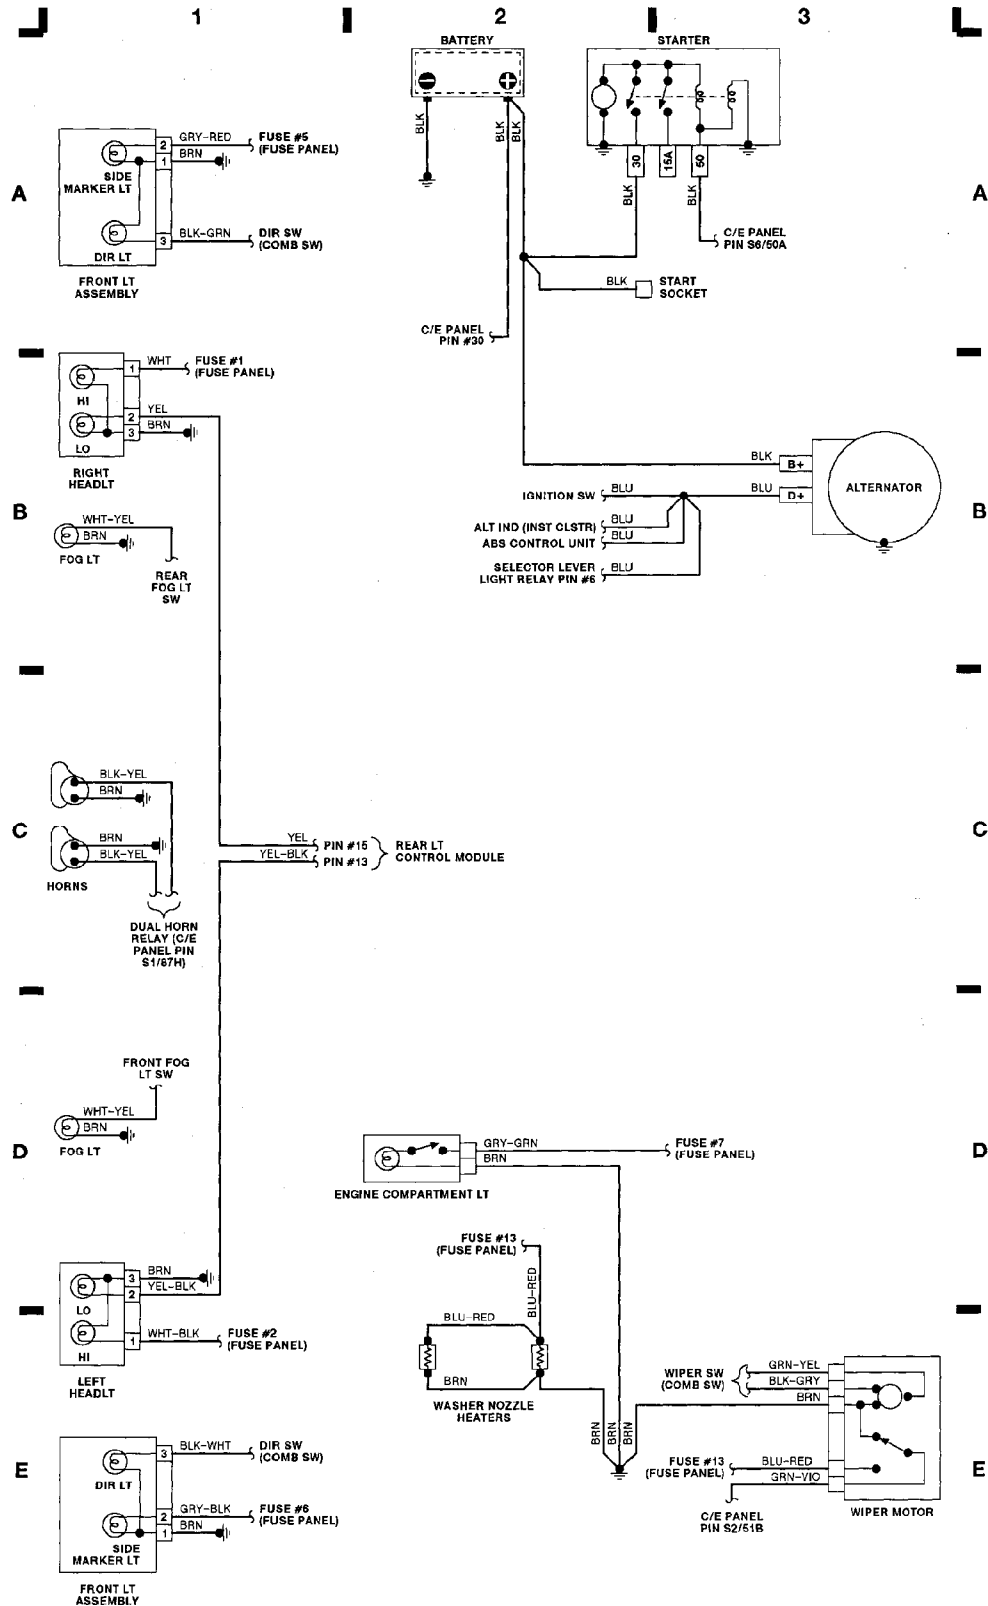

WIRING DIAGRAMS


Fig. 2: Engine Control Module, Throttle Position Sw (Grid 4-7)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

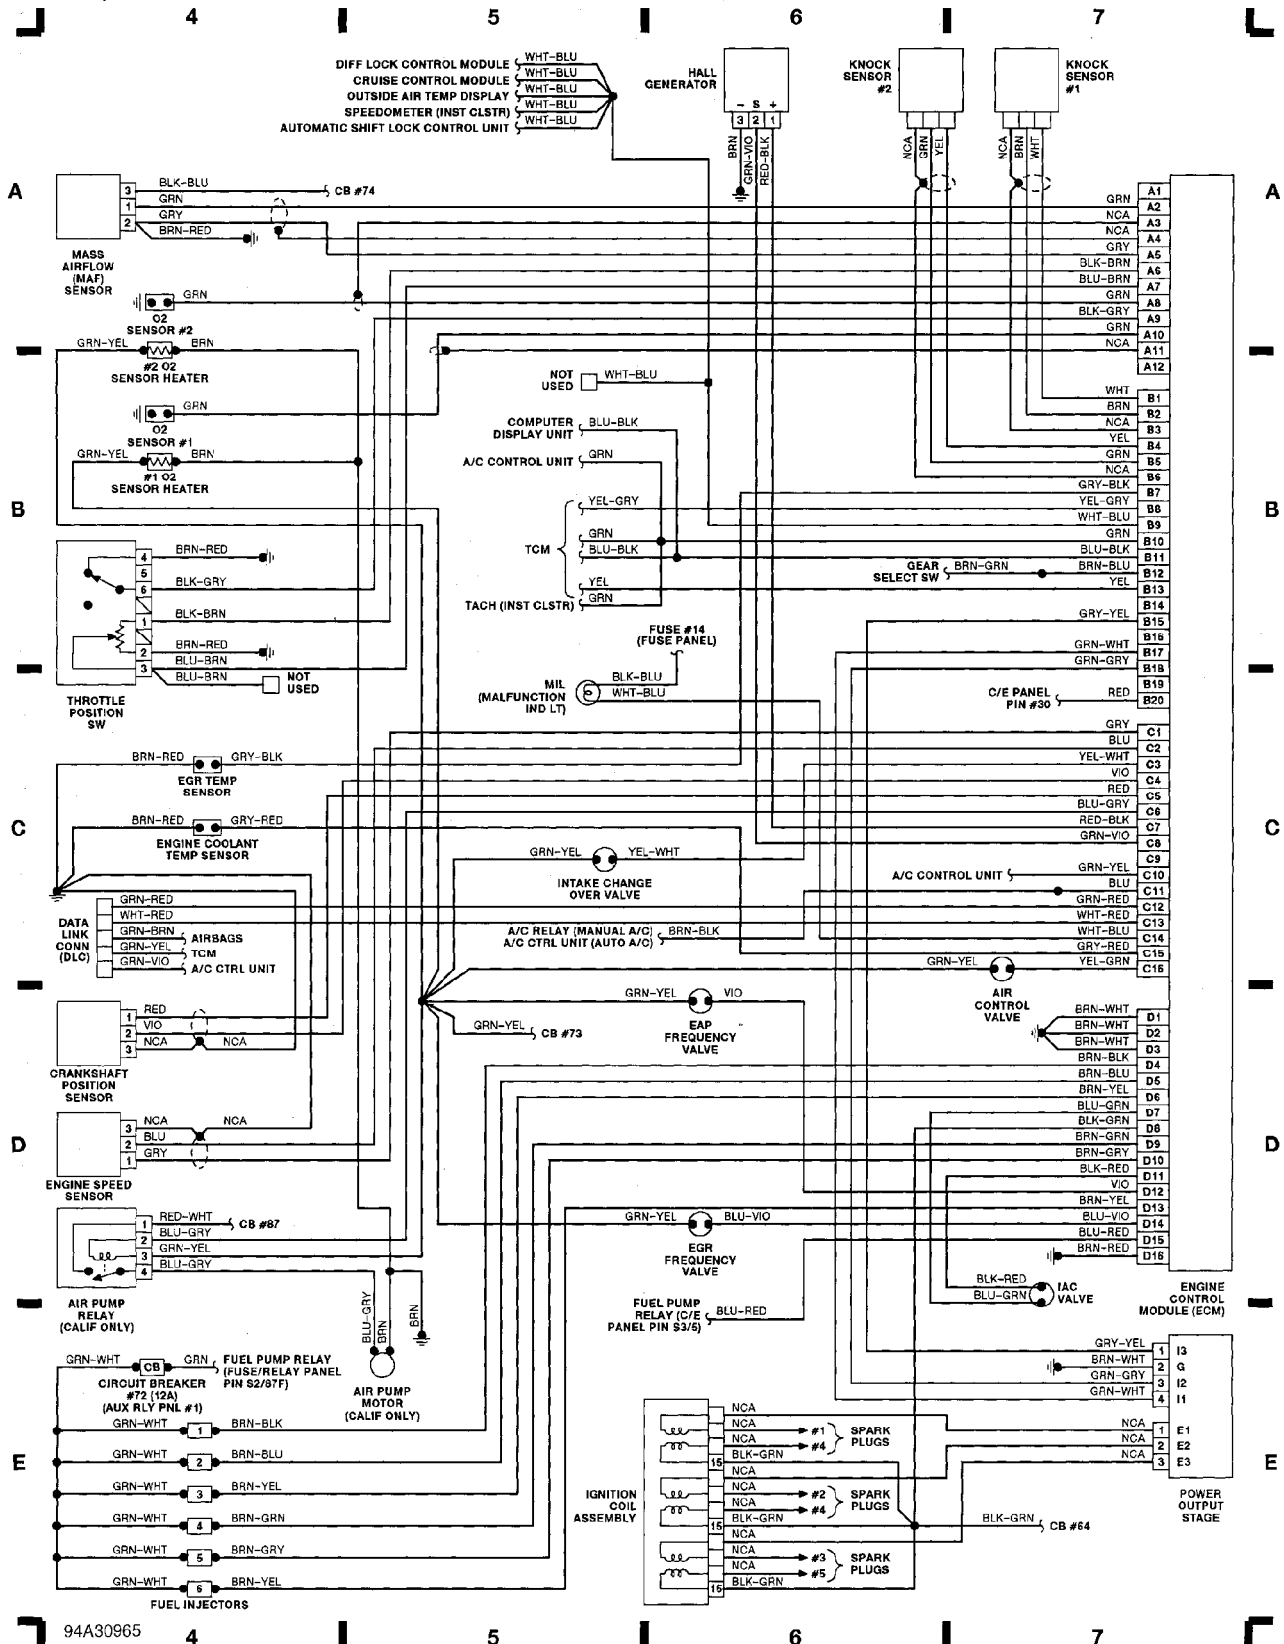

WIRING DIAGRAMS


Fig. 3: Transmission Control Module/Solenoids (Grid 8-11)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

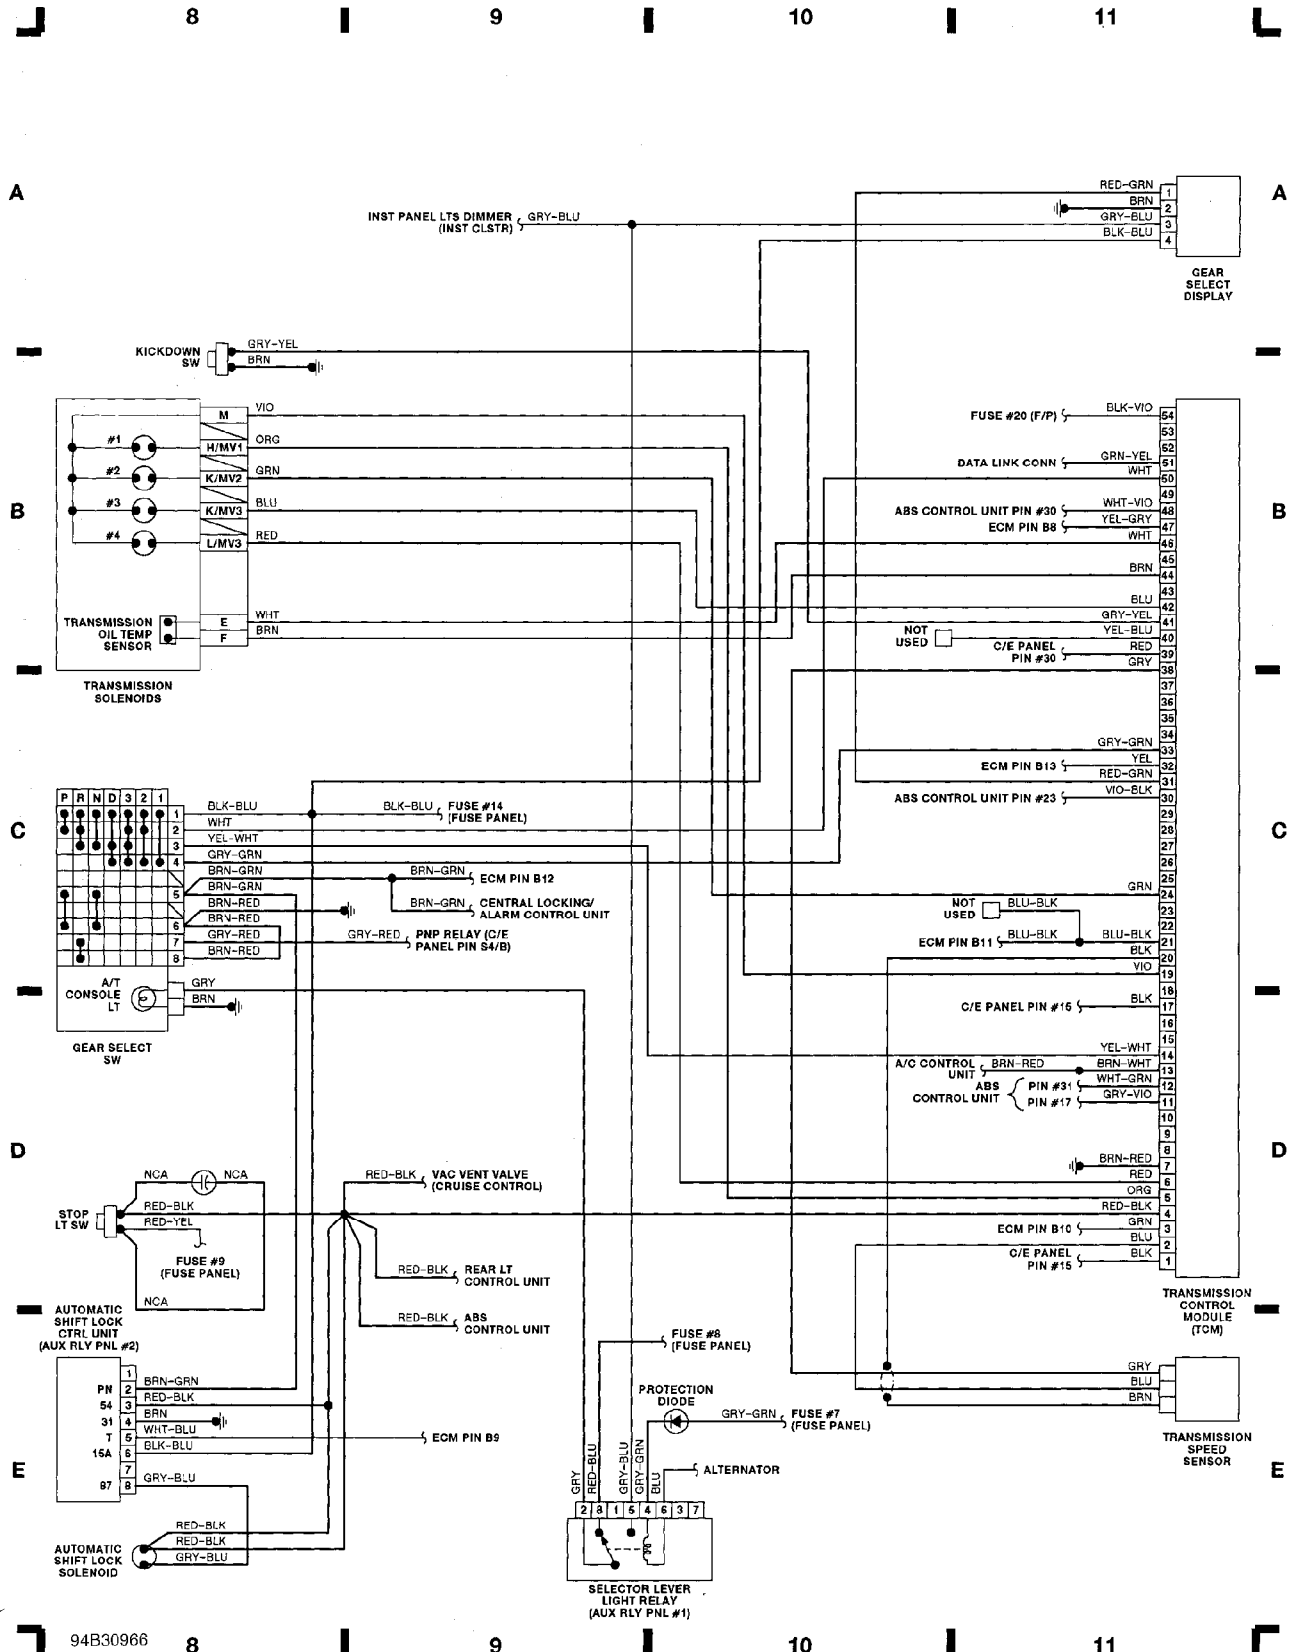

WIRING DIAGRAMS


Fig. 4: ABS Control Unit, ABS Hydraulic Unit (Grid 12-15)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

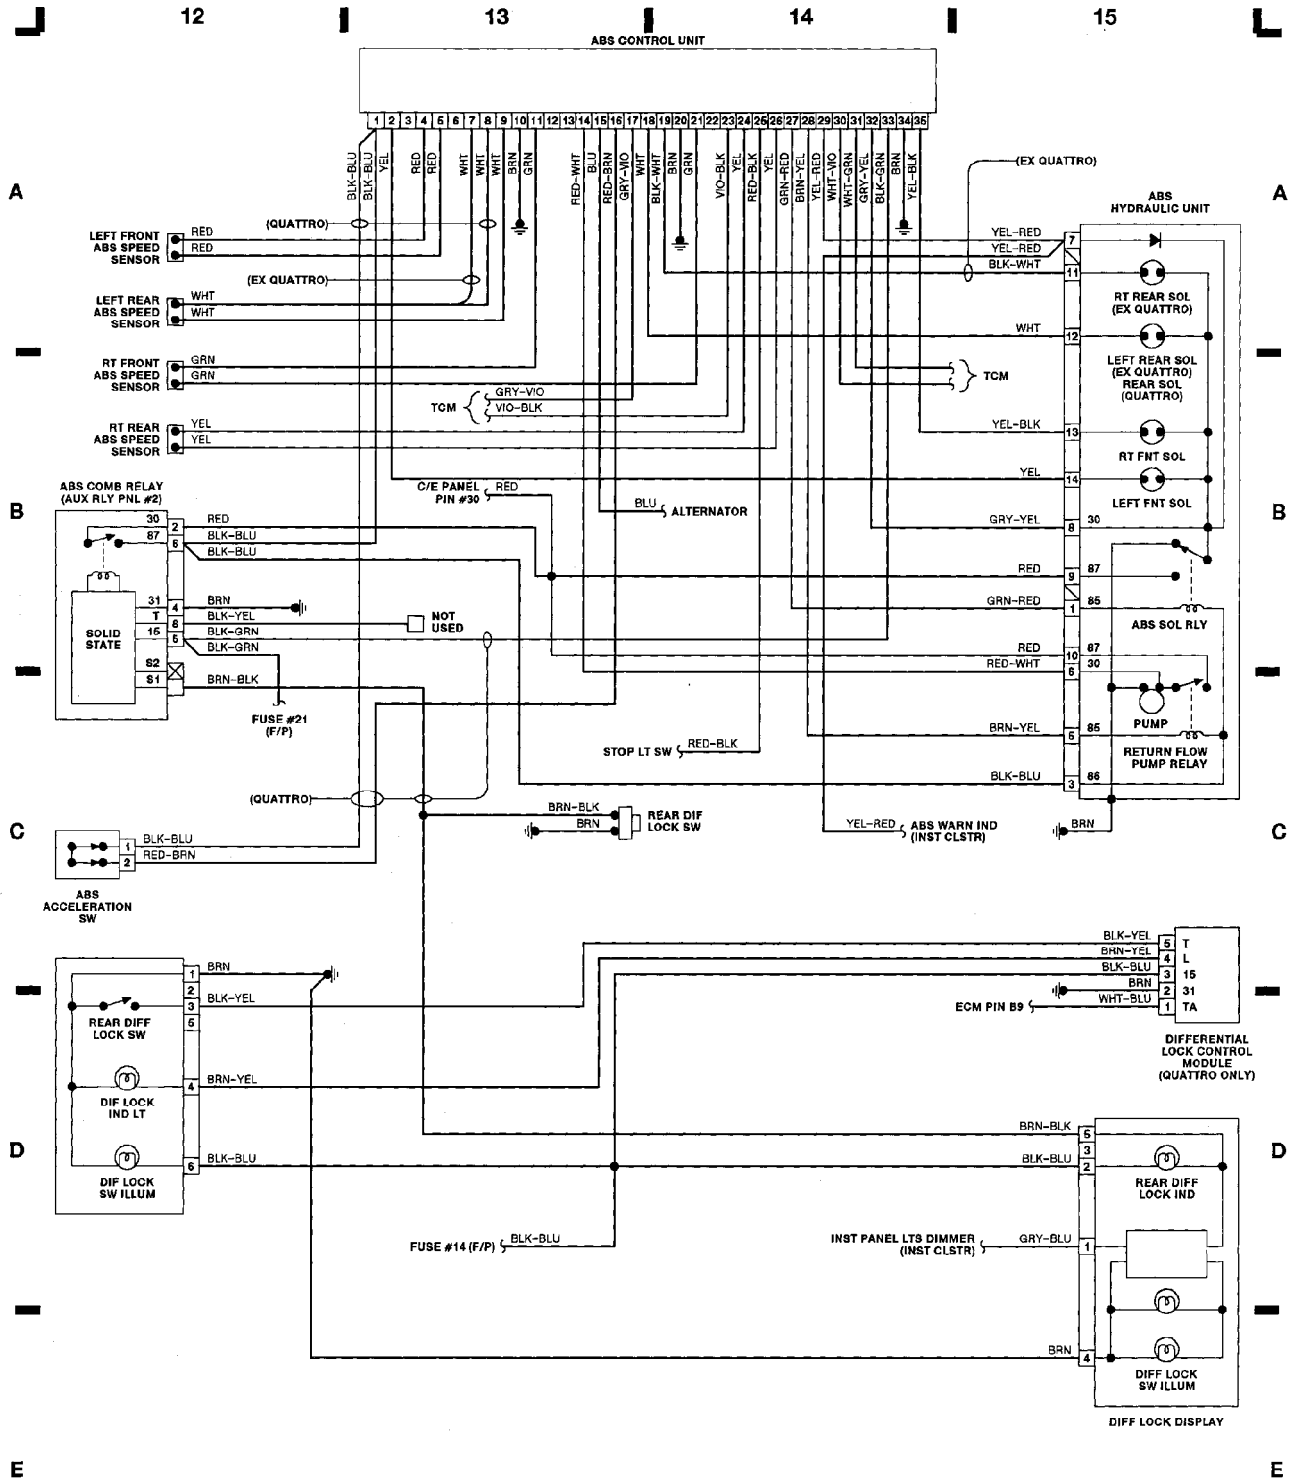

WIRING DIAGRAMS


Fig. 5: Ignition SW, Light SW (Grid 16-19)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

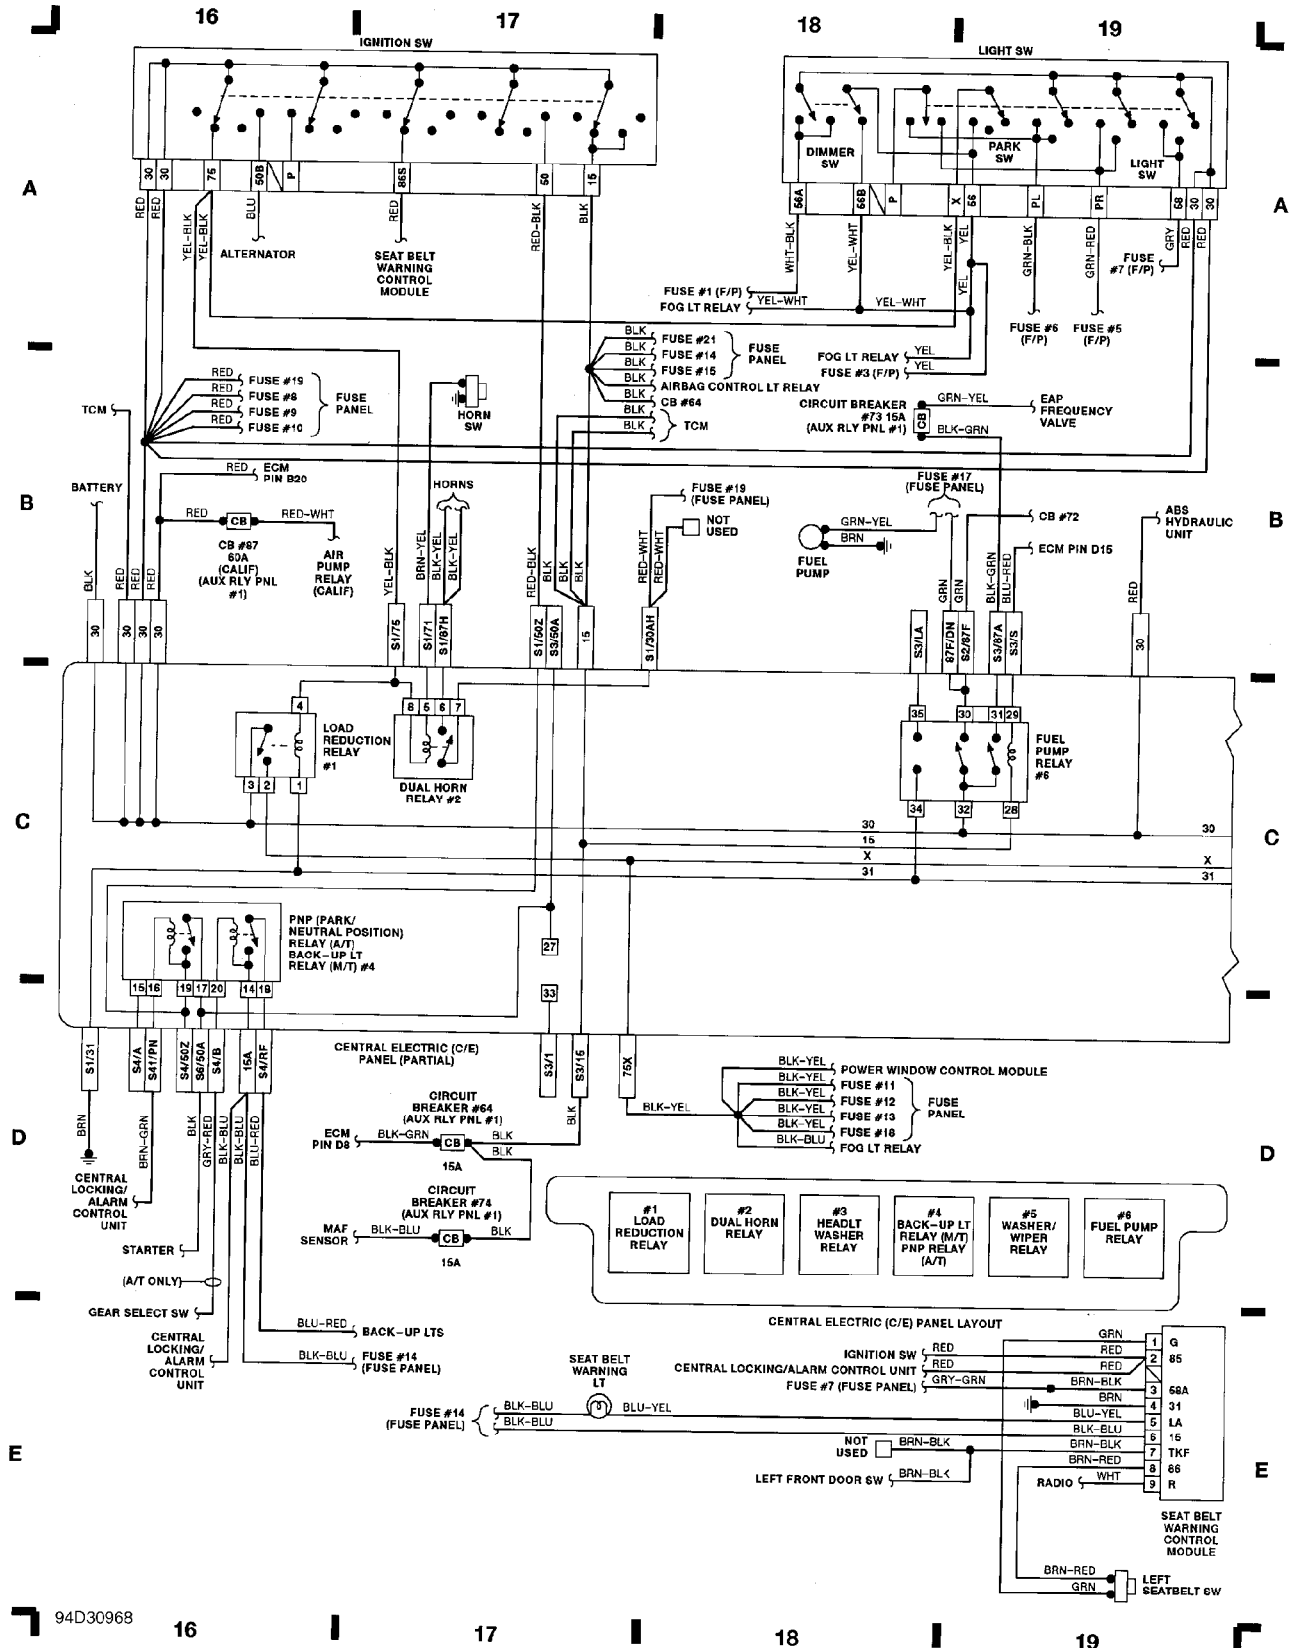

WIRING DIAGRAMS


Fig. 6: Central Electric Panel, Combination SW (Grid 20-23)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

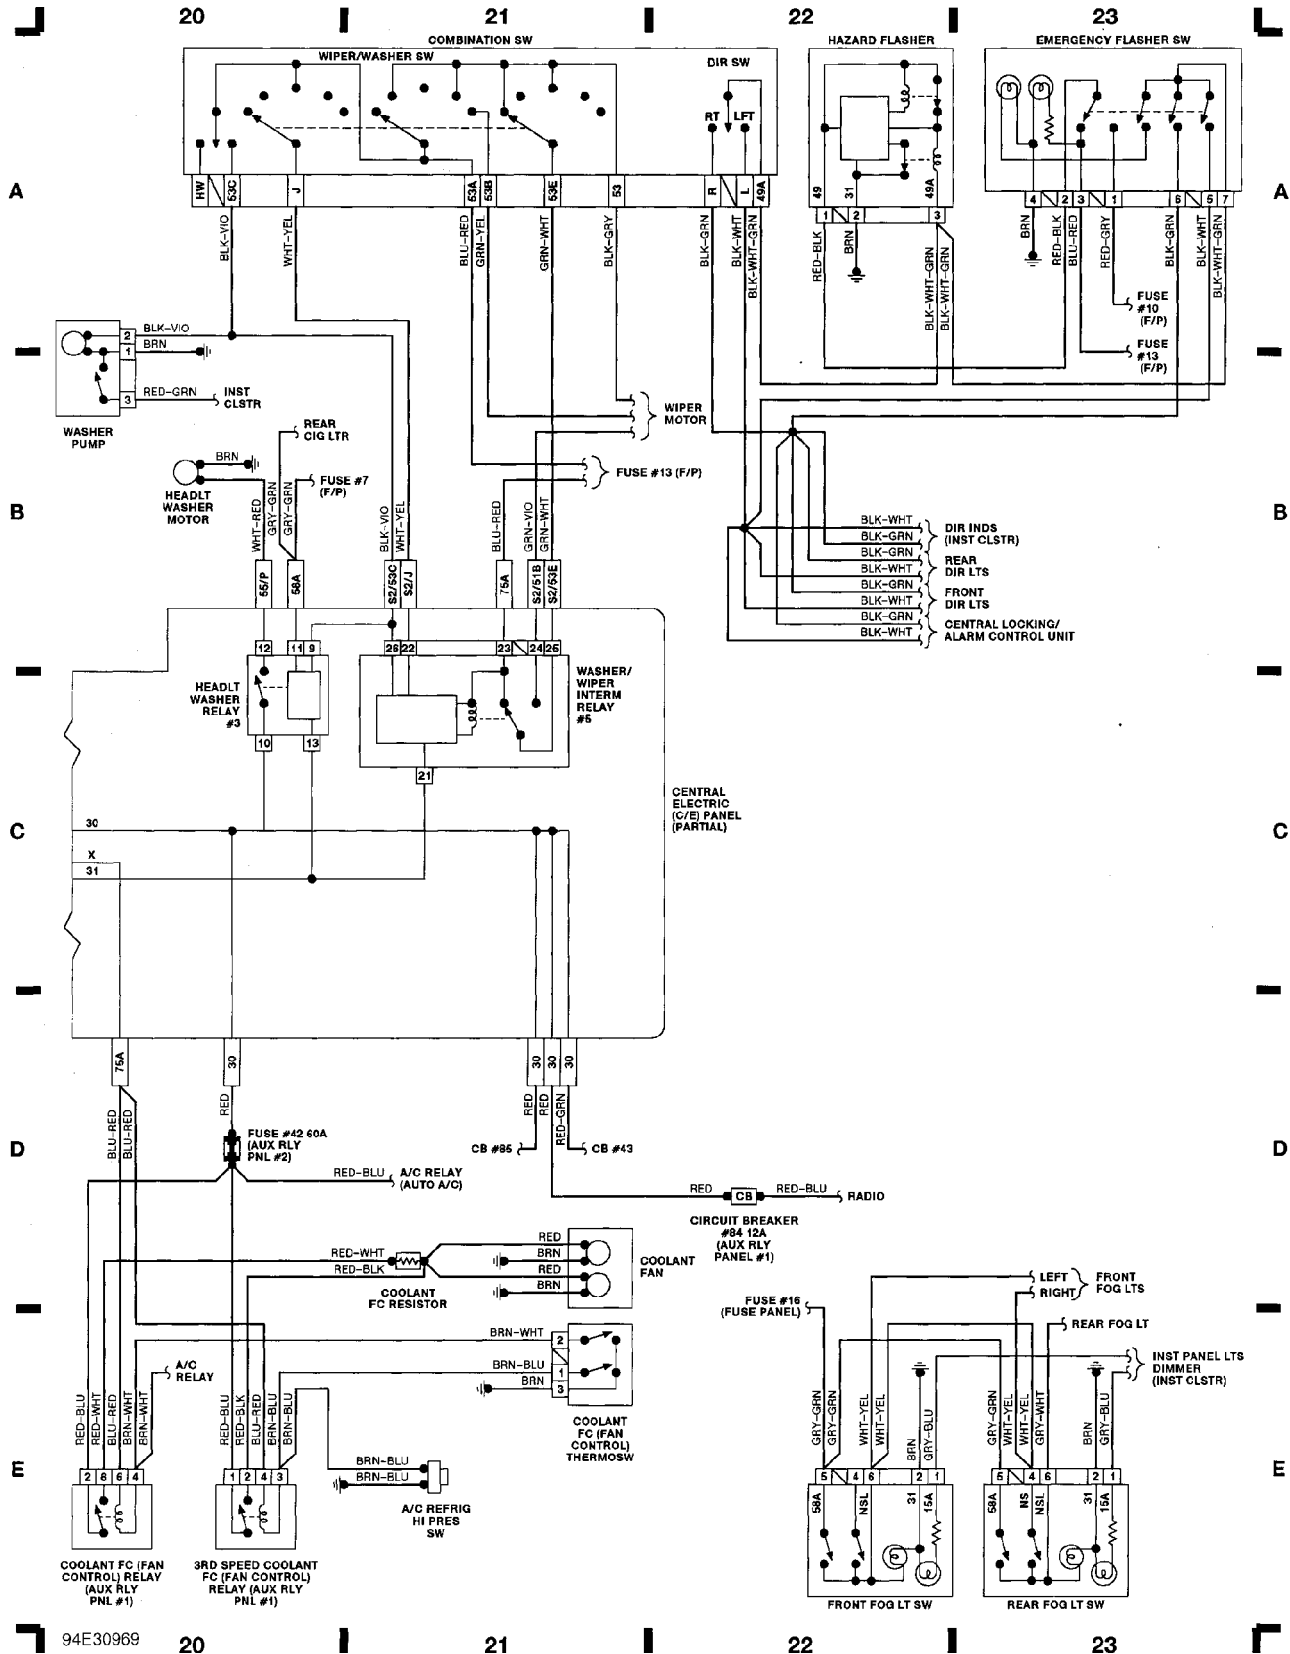

WIRING DIAGRAMS


Fig. 7: Fuse Panel, Fuse Panel Layout (Grid 24-27)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:23PM

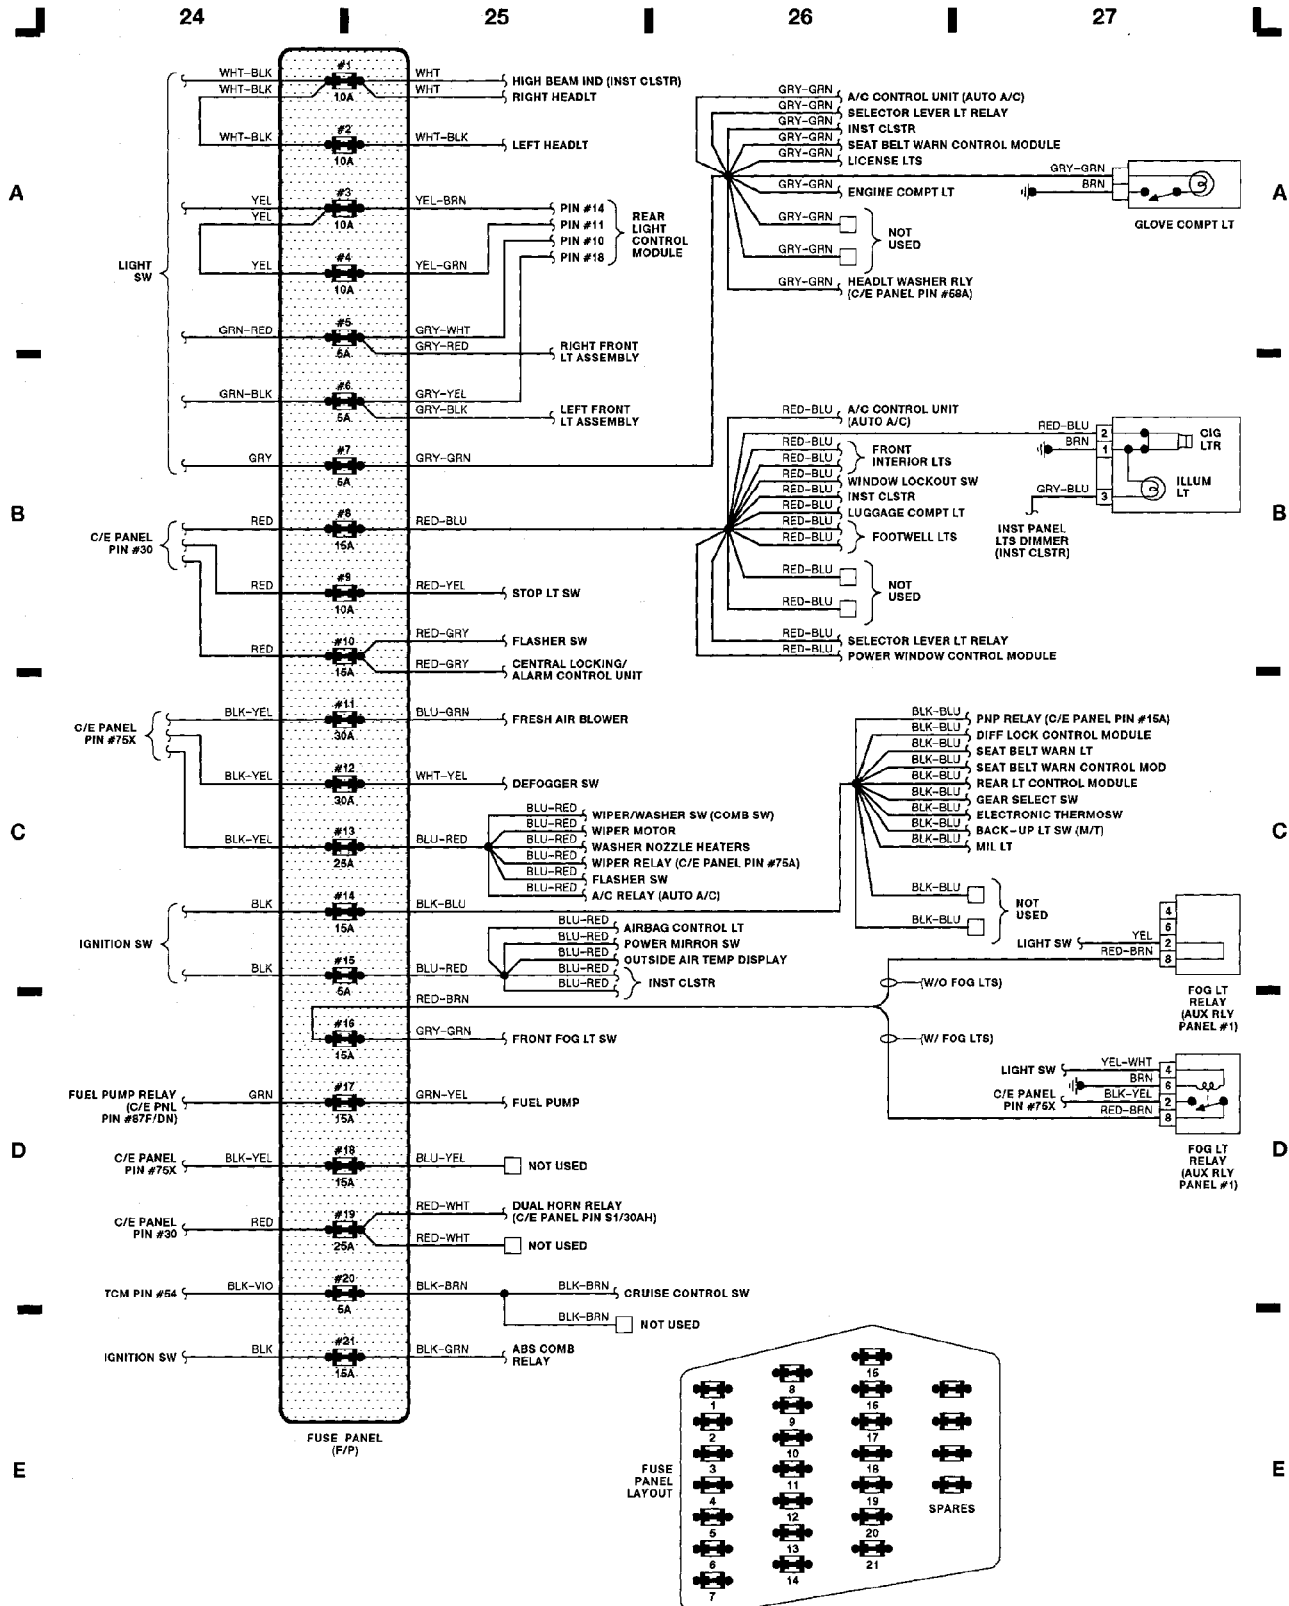

WIRING DIAGRAMS



Fig. 8: Cruise Control SW, A/C SW/Control Unit (Grid 28-31)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC


Monday, October 30, 2000 03:24PM

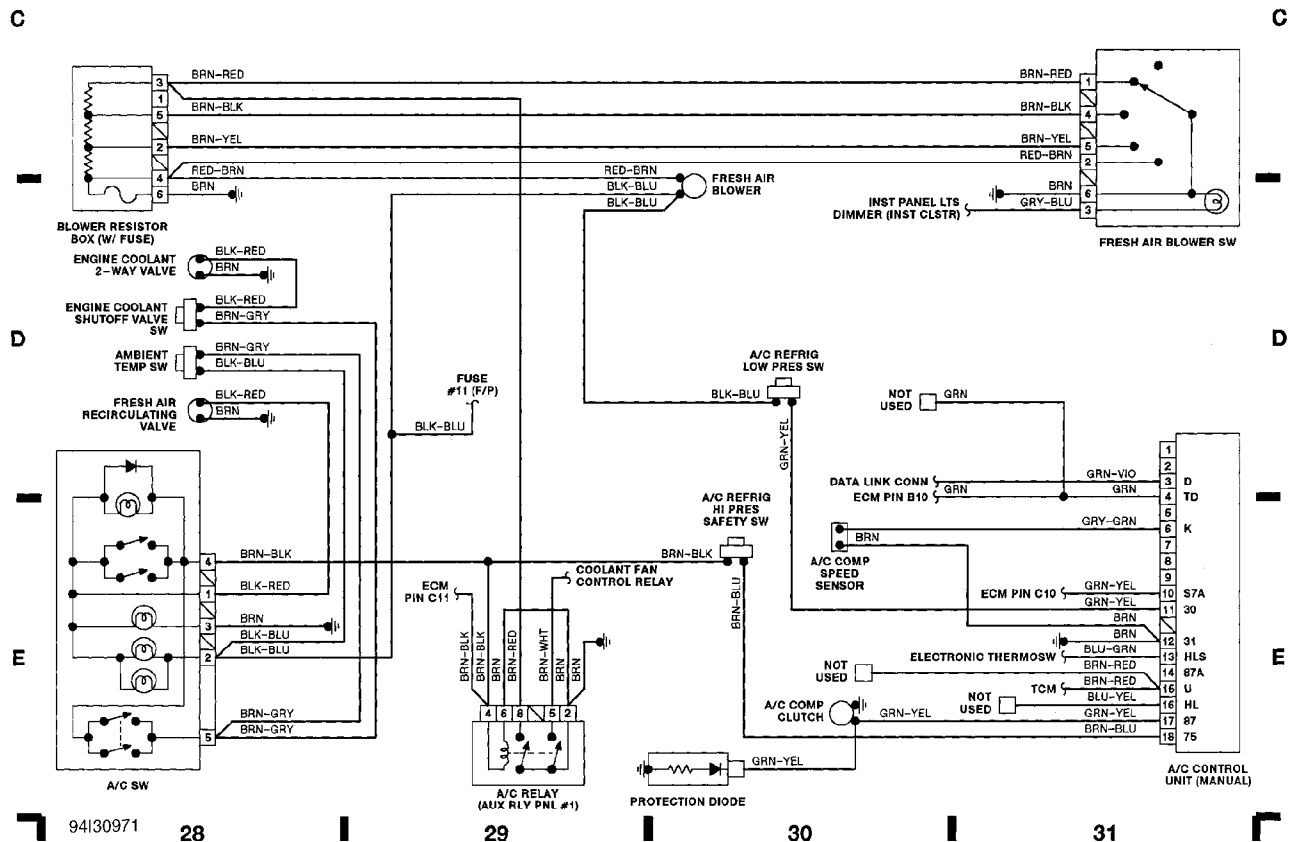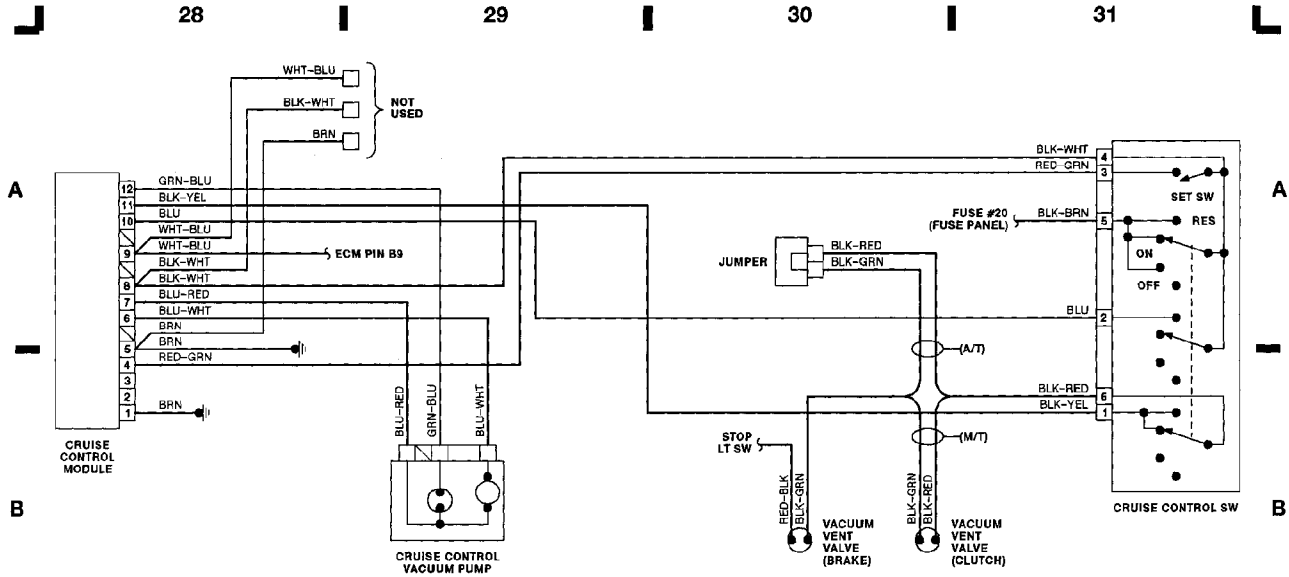

1992 Audi 100

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:24PM

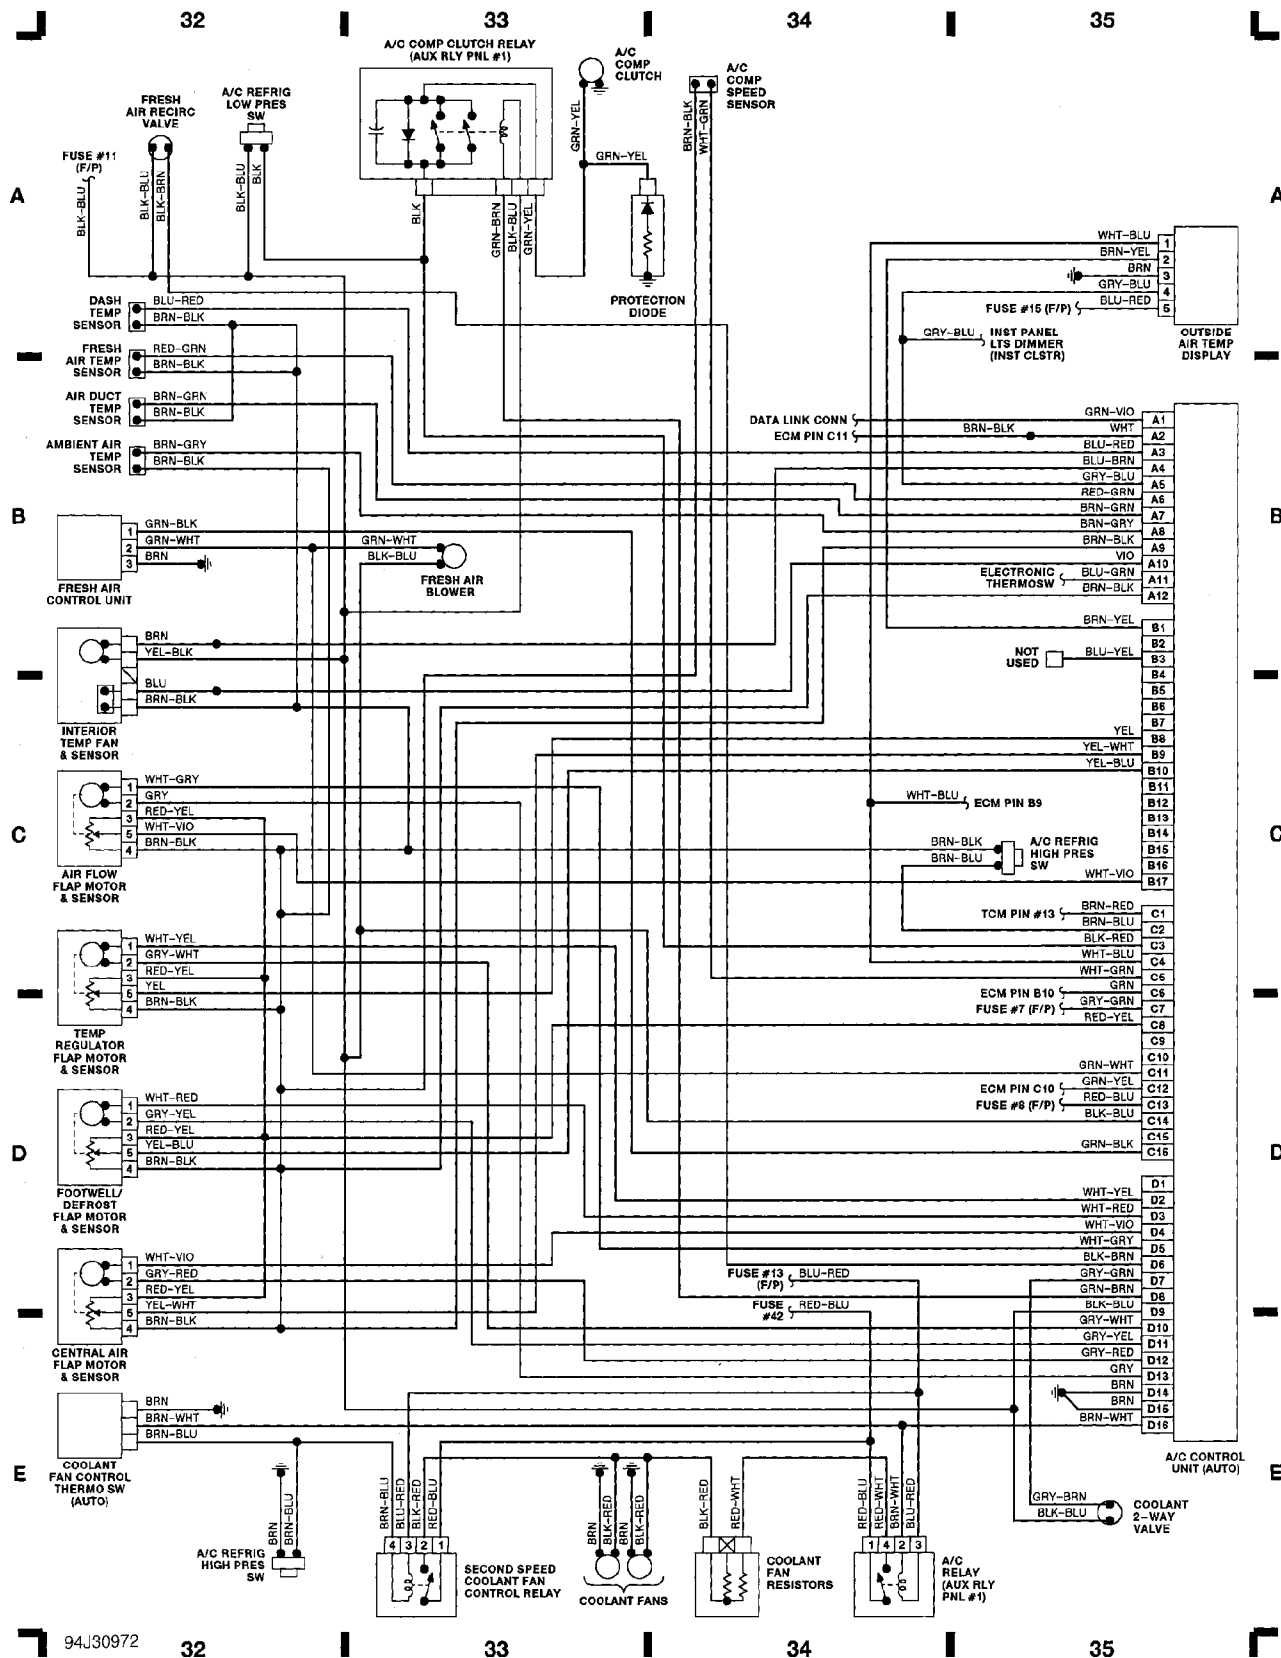

WIRING DIAGRAMS


Fig. 10: Instrument Cluster, Fuel Gauge (Grid 36-39)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:24PM

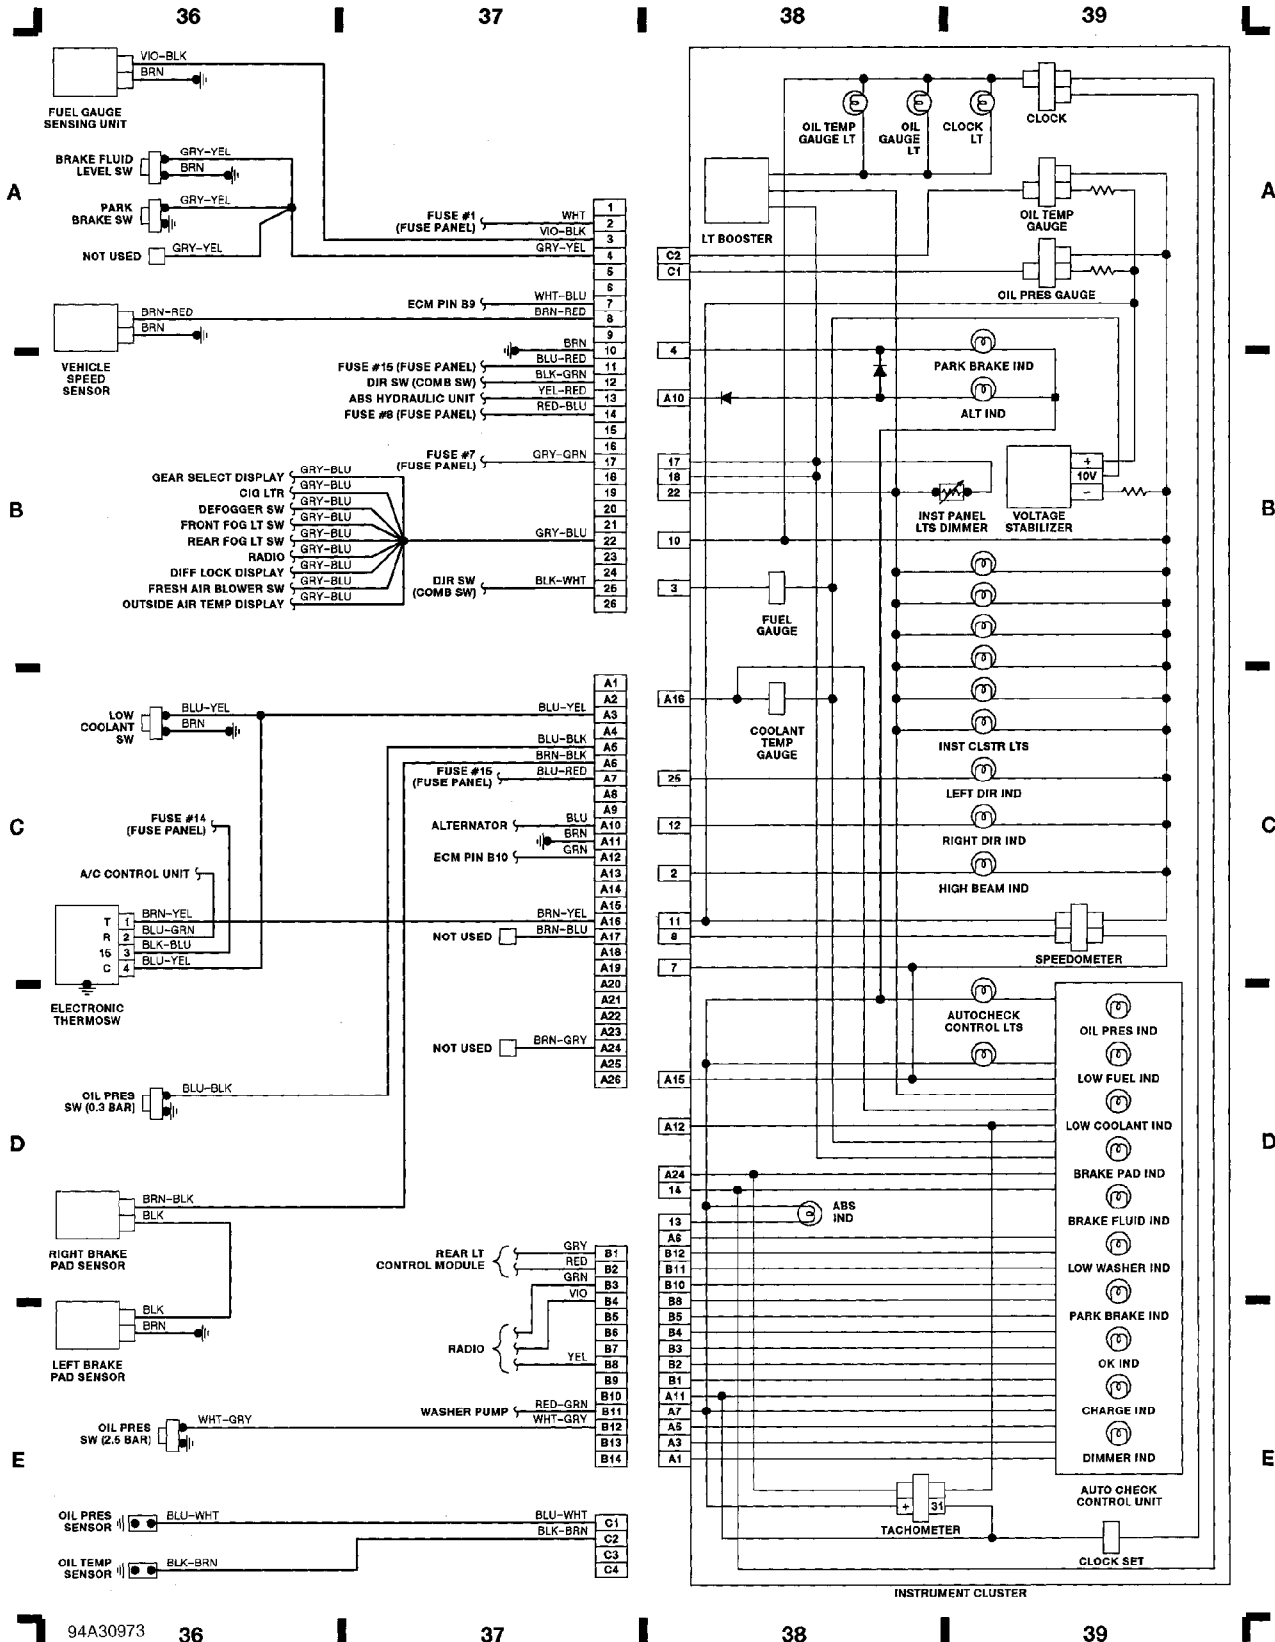

WIRING DIAGRAMS


Fig. 11: Computer Display Unit, C/E Panel (Grid 40-43)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:24PM

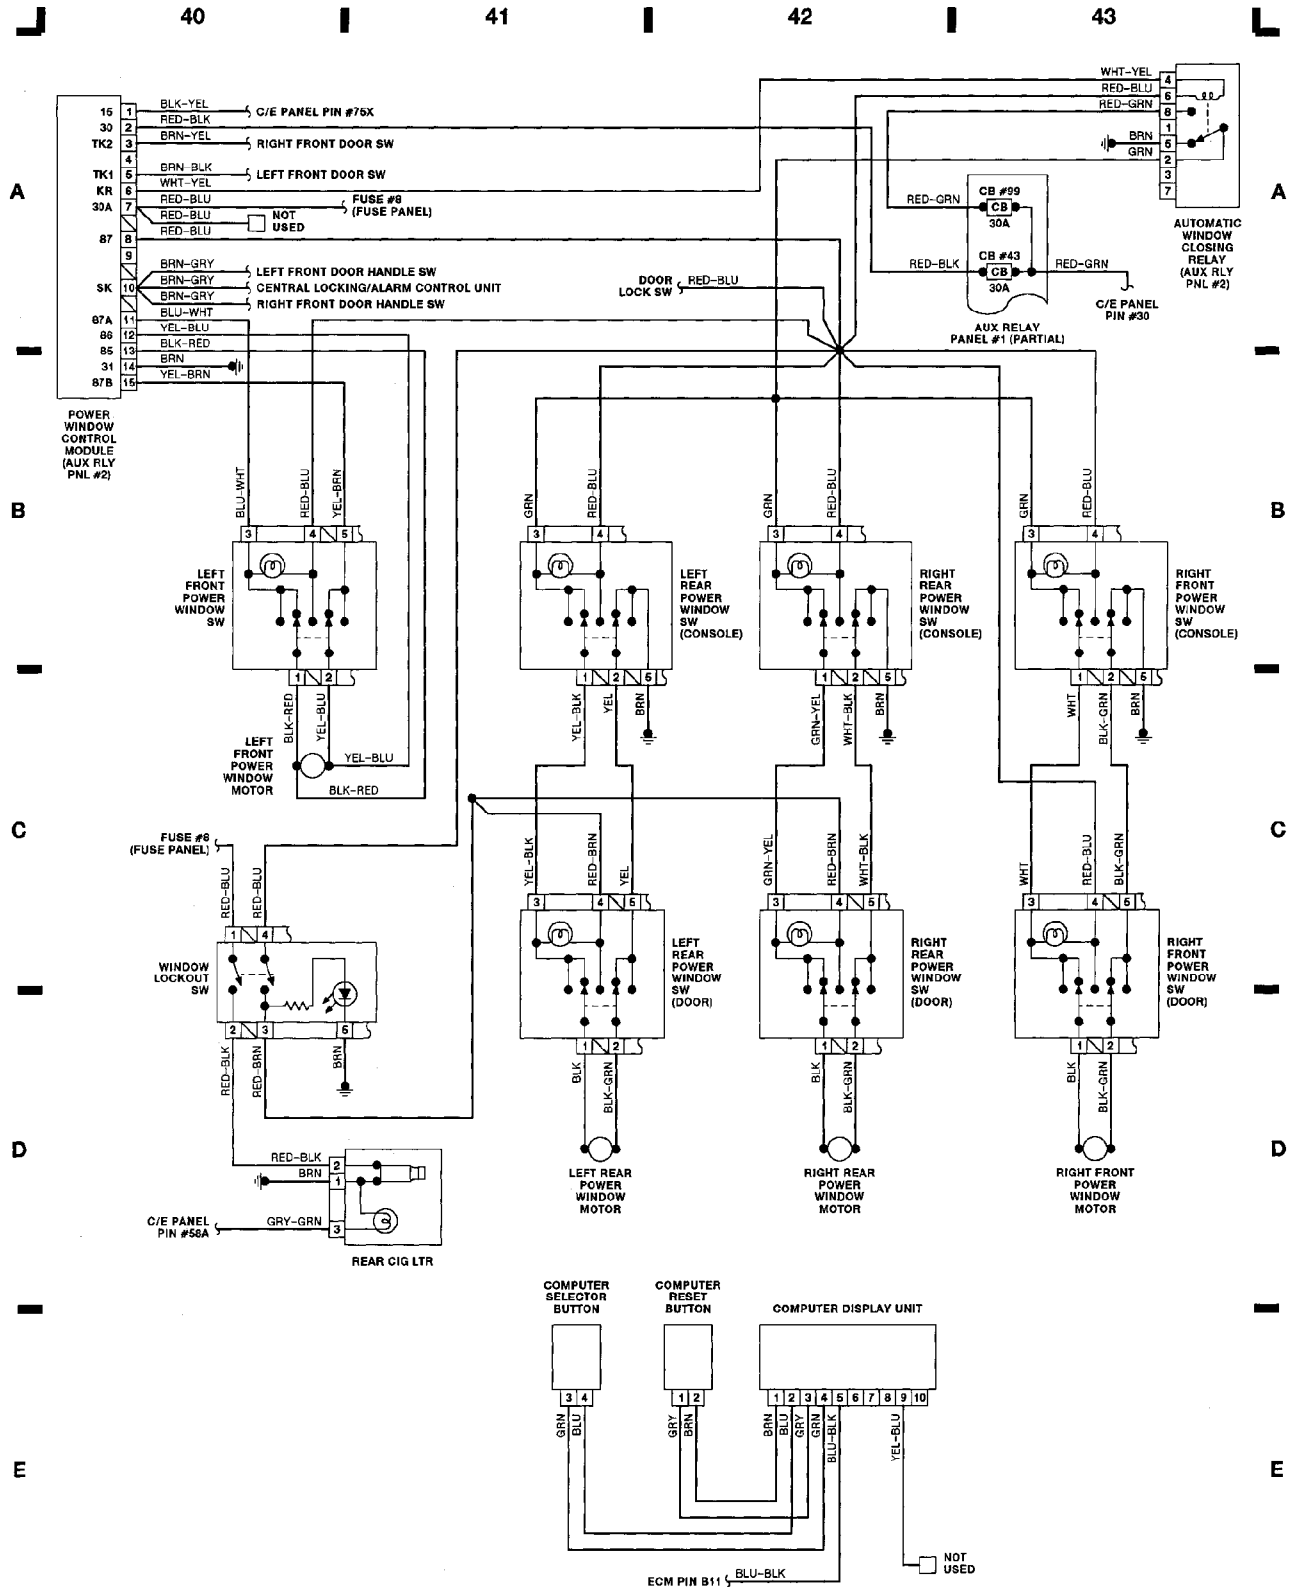

WIRING DIAGRAMS


Fig. 12: Defogger SW, Power Mirror SW (Grid 44-47)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:24PM

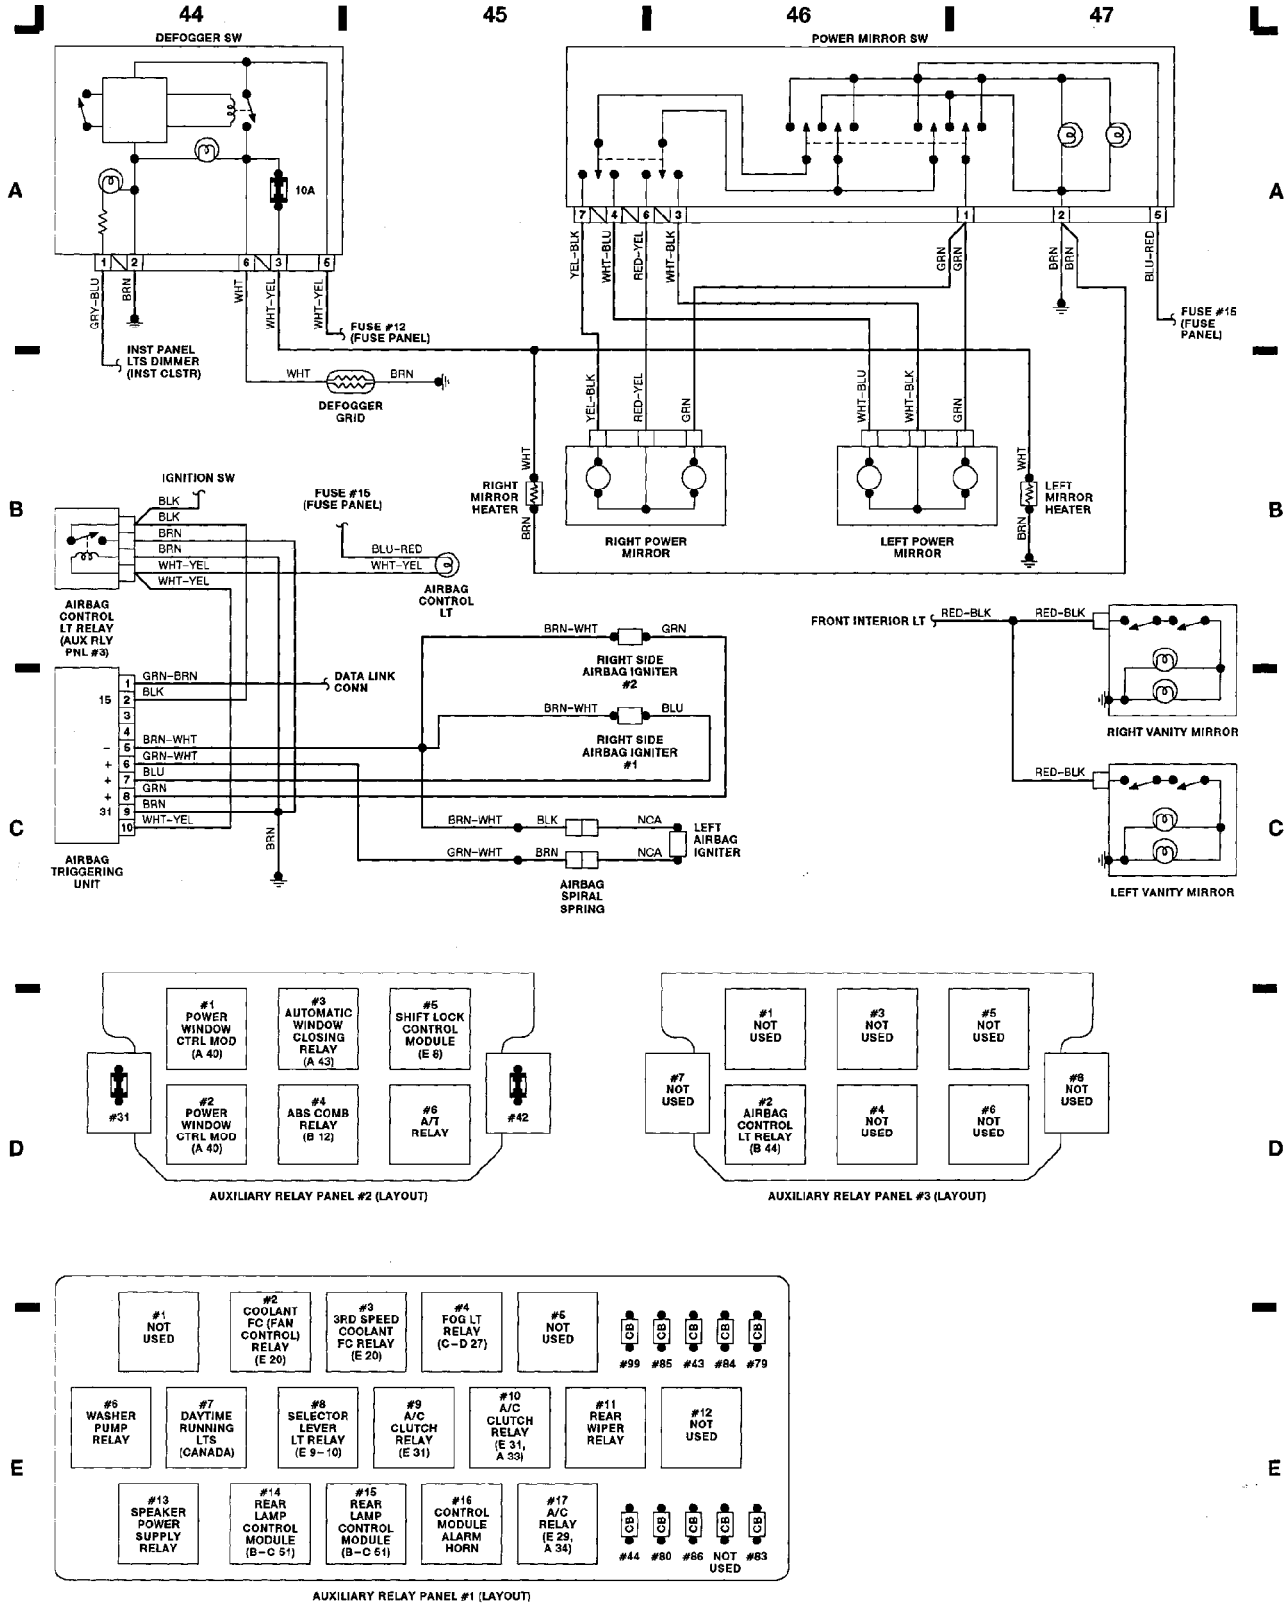

WIRING DIAGRAMS

Fig. 13: Central Locking/Alarm Control Unit (Grid 48-51)

1992 Audi 100

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:24PM

